







User's Manual






























































GB

































Measuring centre

Network Recorder – MC350 TH

TABLE OF CONTENTS

SECURITY ADVICE AND WARNINGS	1
WARNINGS, INFORMATION AND NOTES REGARDING DESIGNATION OF THE PRODUCT	2
<i>Contents of consignment.....</i>	2
BEFORE SWITCHING THE DEVICE ON	3
DEVICE SWITCH OFF WARNING	4
HEALTH AND SAFETY	5
REAL TIME CLOCK	6
DISPOSAL	7
BASIC DESCRIPTION AND OPERATION.....	8
GLOSSARY	8
DESCRIPTION OF THE PRODUCT	9
<i>Appearance</i>	9
PURPOSE AND USE OF MC350 TH MEASURING CENTRE.....	9
<i>Measuring Centre MC350 TH</i>	9
<i>Supported measurements.....</i>	10
CONNECTION	11
INTRODUCTION	11
MOUNTING.....	12
ELECTRIC CONNECTION	13
CONNECTION OF INPUT/OUTPUT MODULES	14
COMMUNICATION CONNECTION	15
<i>RS232.....</i>	15
<i>RS485.....</i>	15
<i>USB</i>	15
<i>Survey of communication connection.....</i>	16
CONNECTION OF POWER SUPPLY	16
FIRST STEPS	17
INTRODUCTION	17
<i>Basic concepts </i>	17
<i>Installation wizard </i>	18
DISPLAY OF DEVICE INFO.....	19
<i>Welcome screen </i>	19
<i>Information  </i>	19
<i>Meaning of icons </i>	19

SETTINGS.....	20
INTRODUCTION	20
MIQEN SOFTWARE	20
<i>Devices management</i>	20
<i>Device settings</i>	20
<i>Real-time measurements</i>	20
<i>Data analysis</i>	20
<i>Software upgrading</i>	21
SETTING PROCEDURE	21
GENERAL SETTINGS	21
<i>Description and Location</i> 	21
<i>Average interval</i>  	22
<i>Language</i>  	22
<i>Temperature unit</i>  	22
<i>Date format</i>  	22
<i>Date and time</i>  	22
<i>Auto Summer/Winter time</i>  	22
<i>Maximum demand (MD) time constant</i>  	22
<i>Starting current for PF and PA (mA)</i> 	23
<i>Starting current for all powers (mA)</i> 	23
<i>Starting voltage for SYNC</i> 	23
<i>Reactive power and energy calculation</i> 	23
CONNECTION.....	24
<i>Connection</i>  	24
<i>Setting of current and voltage ratios</i>  	24
<i>Used voltage and current range</i> 	24
<i>Nominal frequency</i> 	24
<i>Wrong connection warning</i> 	24
<i>Energy flow direction</i> 	24
<i>CT connection</i> 	24
SERIAL COMMUNICATION	25
<i>Serial Communication</i>  	25
USB COMMUNICATION.....	25
<i>USB Communication</i> 	25
DISPLAY	25
<i>Display settings</i>  	25
<i>Demo cycling period</i>  	25
<i>Settings of customized screens</i>  	25
SECURITY.....	26
<i>Password setting</i>  	26
<i>Password modification</i>  	27
<i>Password disabling</i>  	27
<i>Password and language</i>	27
ENERGY - COUNTERS	27
<i>Active tariff</i>  	27
<i>Common Energy Exponent (Common Energy Counter Resolution – MiQen 2.x and above)</i>	27
<i>Counter divider (Individual counter Resolution – MiQen 2.x and above)</i>	28
<i>Tariff clock</i> 	28
<i>Counter measured quantity</i> 	29
INPUTS AND OUTPUTS.....	30
<i>Pulse (SO) module</i>  	30
<i>Relay (alarm) module</i>  	30
<i>Functions of output modules (Pulse and Relay)</i>  	30
<i>Digital input module</i> 	31
<i>Tariff input module</i> 	32
ALARMS	32
<i>Alarms setting</i> 	32
<i>Types of alarms</i>	32
MEMORY	33
<i>Memory division</i> 	33
<i>Memory operation</i>  	33
<i>Memory clearing</i> 	33
<i>Recorders A and B setting</i> 	34

RESET OPERATIONS	35
Reset energy counters (E1, E2, E3, E4)  	35
Reset maximal MD values  	35
Reset the last MD period  	35
Alarm relay (1 or 2) Off  	35
Reset alarm statistic 	35
MEASUREMENTS.....	36
INTRODUCTION	36
AVAILABLE CONNECTIONS	36
Survey of supported measurements regarding connection mode	36
EXPLANATION OF BASIC CONCEPTS	38
Sample factor – MV	38
Average interval – MP	38
Power and energy flow	38
PRESENT VALUES	39
CALCULATION AND DISPLAY OF MEASUREMENTS	39
Voltage  	40
Current  	40
Active, reactive and apparent power  	40
Power factor and power angle  	40
Frequency  	40
Energy  	40
MD values  	41
THD - Total harmonic distortion  	41
Customized screens  	41
Overview  	41
ALARMS	42
Survey of alarms  	42
DEMONSTRATION MEASUREMENTS	42
Demo cycling 	42
TECHNICAL DATA	43
ACCURACY	43
INPUTS	44
Voltage input	44
Current input	44
Frequency	44
Supply	44
CONNECTION	44
Permitted conductor cross-sections	44
MODULES	45
Relay (alarm) module	45
SO (pulse) output module	45
Tariff input module	45
Digital input module	45
COMMUNICATION	45
ELECTRONIC FEATURES	46
LCD	46
Response time	46
Memory	46
LED's	46
RTC backup supply	46
SAFETY FEATURES	46
Safety	46
Test voltage	46
EMC	46
Protection	46
Ambient conditions	46
Enclosure	46
DIMENSIONS	47


APPENDIX A: MODBUS PROTOCOL.....	48
MODBUS COMMUNICATION PROTOCOL	48
<i>Modbus protocol</i>	48
<i>Register table for the normalized actual measurements</i>	50
<i>100% values calculations for normalized measurements</i>	52
<i>Register table for the basic settings</i>	52
<i>Data types decoding</i>	53
APPENDIX B: DNP3 COMMUNICATION PROTOCOL	54
DNP3 COMMUNICATION PROTOCOL.....	54
<i>DNP3</i>	54
<i>Register table for the actual measurements</i>	55
APPENDIX E: CALCULATIONS & EQUATIONS.....	58
CALCULATIONS.....	58
<i>Definitions of symbols</i>	58
EQUATIONS.....	58
<i>Voltage</i>	58
<i>Current</i>	59
<i>Power</i>	59
<i>THD</i>	60

SECURITY ADVICE AND WARNINGS

Please read this chapter carefully before starting work with a Measuring centre.



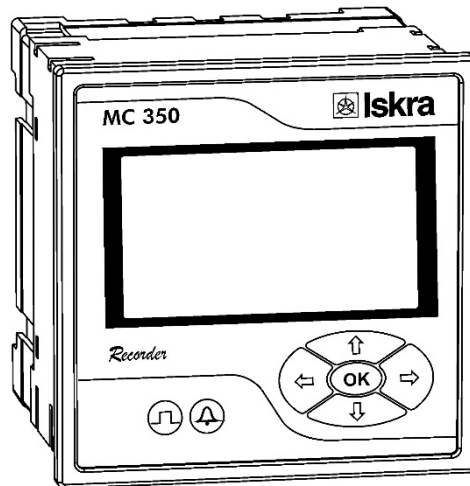


This chapter deals with important information and warnings that should be considered for safe work with a Measuring centre.

This booklet contains instructions for installation and use of Measuring centre MC350 TH. Installation and use of devices also includes work with dangerous currents and voltages, therefore such work shall be carried out by qualified persons. The *Iskra, d.d.* Company assumes no responsibility in connection with installation and use of the product. If there is any doubt regarding installation and use of the system in which the instrument is used for measuring or supervision, please contact a person who is responsible for installation of such system.



WARNINGS, INFORMATION AND NOTES REGARDING DESIGNATION OF THE PRODUCT

Used symbols on devices' housing:

	<p>See product documentation.</p>
	<p>Double insulation in compliance with the EN 61010-1 standard.</p>
	<p>Functional ground potential. Note: This symbol is also used for marking a terminal for protective ground potential if it is used as a part of connection terminal or auxiliary supply terminals.</p>
	<p>Compliance of the product with directive 2002/96/EC, as first priority, the prevention of waste electrical and electronic equipment (WEEE), and in addition, the reuse, recycling and other forms of recovery of such wastes so as to reduce the disposal of waste. It also seeks to improve the environmental performance of all operators involved in the life cycle of electrical and electronic equipment.</p>
	<p>Compliance of the product with European CE directives.</p>

Contents of consignment

The consignment includes:

- Measuring centre MC350 TH
- Quick Guide

BEFORE SWITCHING THE DEVICE ON

Check the following before switching on the device:

- Nominal voltage,
- Supply voltage,
- Nominal frequency,
- Voltage ratio and phase sequence,
- Current transformer ratio and terminals integrity,
- Protection fuse (recommended maximal external fuse size is 6 A – a type with a red dot or equivalent),
- Integrity of earth terminals (where necessary)



CAUTION

A current transformer secondary should be short circuited before connecting the meter.

DEVICE SWITCH OFF WARNING

Auxiliary supply circuits for (external) relays can include capacitors between supply and ground. In order to prevent electrical shock hazard, the capacitors should be discharged via external terminals after having completely disconnected auxiliary supply (both poles of any DC supply).

HEALTH AND SAFETY

The purpose of this chapter is to provide a user with information on safe installation and handling with the product in order to assure its correct use and continuous operation.

We expect that everyone using the product will be familiar with the contents of chapter »Security Advices and Warnings«.

If equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

REAL TIME CLOCK

As a backup power supply for Real time clock supercap is built in. Support time is up to 2 days (after each power supply down).

DISPOSAL

It is forbidden to deposit electrical and electronic equipment as municipal waste. The manufacturer or provider shall take waste electrical and electronic equipment free of charge. The complete procedure after lifetime should comply with the Directive EZ 2002/96/EG about restriction on the use of certain hazardous substances in electrical and electronic equipment or a corresponding Url 118/04.

BASIC DESCRIPTION AND OPERATION


Glossary

Term	Explanation
AC	Alternating voltage
Hand-over place	Connection spot of consumer installation in public network
Hysteresis expressed as percentage [%]	Percentage specifies increase or decrease of a measurement from a certain limit after exceeding it.
MD	Measurement of average values in time interval
MiQen	Software for <i>Iskra, d.d.</i> instruments
MODBUS	Industrial protocol for data transmission
M_p – Average interval	Defines frequency of refreshing displayed measurements on the basis of a Sample factor
M_v – Sample factor	Defines a number of periods for measuring calculation on the basis of measured frequency
PA total	Angle calculated from total active and apparent power
PA1, PA2, PA3	Angle between fundamental phase voltage and phase current
PF	Power factor
RMS	Root Mean Square value
RTC	Real time clock
THD	Total harmonic distortion
2SO	S0 (pulse) output module
2TI	Tariff input module
2RO	Relay (alarm) output module
2DI	Digital input module

Description of the product

A measuring centre is used for measuring, analysing and monitoring three phase electrical power network. Using the latest technologies and numerical methods we have reached high accuracy over a wide measuring range of voltage, current and integrated quantities.

Appearance

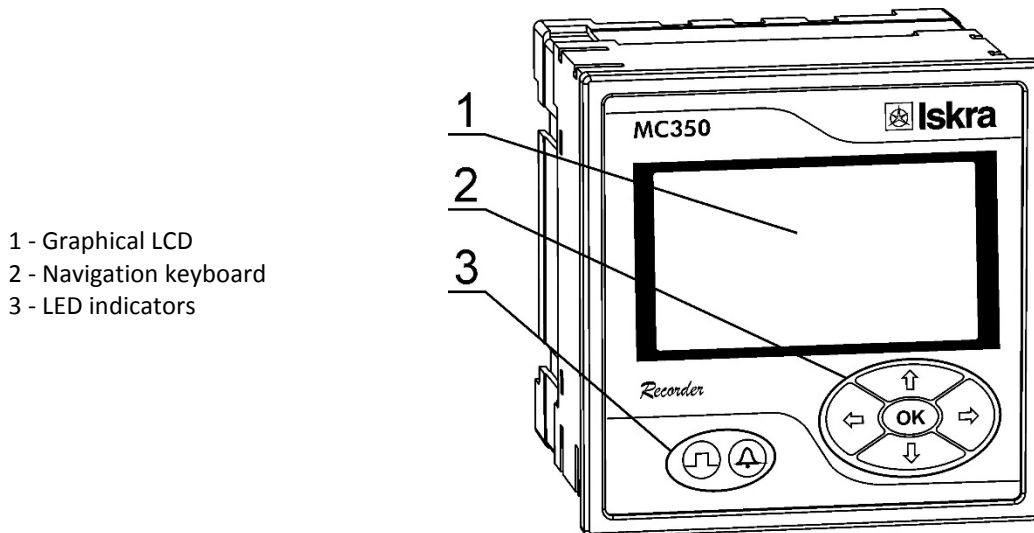

- 1 - Graphical LCD
- 2 - Navigation keyboard
- 3 - LED indicators

GRAPHICAL LCD

A graphical LCD with back light is used for high resolution of displayed measuring quantities and for a display of selected functions when setting the device.

NAVIGATION KEYBOARD

The "OK" key is used for confirming the settings, selecting and exiting the display. Direction keys are used for shifting between screens and menus.

LED INDICATORS

LED indicators warn of a certain state of the instrument. A left (red) one is blinking as pulse output. A right (red) one is blinking when the condition for the alarm is fulfilled.

Purpose and use of MC350 TH Measuring Centre

Measuring Centre MC350 TH

MC350 TH is used for monitoring and measuring electric quantities of single and three-phase electrical power distribution system. Measuring instantaneous values for more than 60 quantities. Build in 8Mb flash memory for storing selected measurements and alarms. Energy is recorded in all four quadrants in up to four tariffs and since it also measures active and reactive power in all directions it can provide data about power direction.

Up to 2 pulse outputs or 2 tariff inputs are available for measurements control. The meter can use pulse output as alarm output. Outputs type is available as mechanical relay or open collector outputs (S0).

Supported measurements

	Basic measurements
Phase	Voltage U1, U2, U3 and U~
	Current I1, I2, I3, In, It and I~
	Active power P1, P2, P3, and Pt
	Reactive power Q1, Q2, Q3, and Qt
	Apparent power S1, S2, S3, and St
	Power factor PF1, PF2, PF3 and PF
	Power angle ϕ_1 , ϕ_2 , ϕ_3 and ϕ
	THD of phase voltage U1, U2 and U3
	THD of power angle I1, I2 and I3
Phase-to-phase	Phase-to-phase voltage U12, U23, U31
	Average phase-to-phase voltage Uff
	Phase-to-phase angle ϕ_{12} , ϕ_{23} , ϕ_{31}
	THD of phase-to-phase voltage
Energy	Counter 1
	Counter 2
	Counter 3
	Counter 4
	Total
	Active tariff

	Other measurements
MD values	Phase current I1, I2, I3
	Active power P (Positive)
	Active power P (Negative)
	Reactive power Q – L
	Reactive power Q – C
	Apparent power S

	Other measurements
	Frequency
	Internal temperature

CONNECTION


Introduction

This chapter deals with the instructions for measuring centre connection. Both the use and connection of the device includes handling with dangerous currents and voltages. Connection shall therefore be performed by a qualified person. *Iskra, d.d.* does not take any responsibility regarding the use and connection. If any doubt occurs regarding connection and use in the system which device is intended for, please contact a person who is responsible for such installations.

Before use: Check voltages and phase rotation, supply voltage and nominal frequency.

Check protective fuse rating (the recommended maximum rating of the external protective fuse for this equipment is 6A - Red Spot type or equivalent).

WARNING!

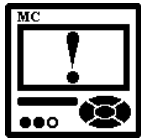

Wrong or incomplete connection of voltage or other terminals can cause non-operation or damage to the device.


PLEASE NOTE



After connection, settings have to be performed via a keyboard on the front side of the instrument that reflect connection of device to voltage network (connection mode, current and voltage transformers ratio,...).

Mounting

Before inserting device into the panel cut out, remove four screws, insert device and position the screws correctly. Fix device to the panel.

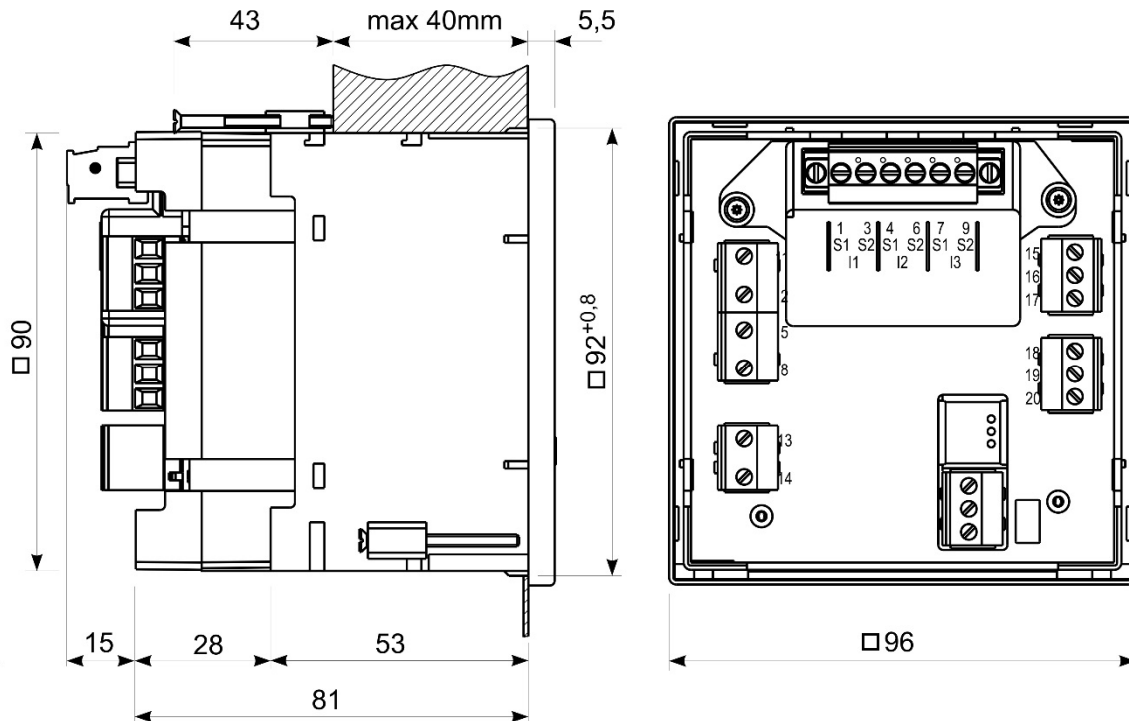

Panel cut out:
DIN 92 x 92 mm ^{+0.8}


Remove protection foil from the screen.

Electric connection



Voltage inputs of measuring centre can be connected directly to low-voltage network or via a voltage measuring transformer to high-voltage network.

Current inputs shall be connected to network via a corresponding current transformer.



Choose corresponding connection from the figures below and connect corresponding voltages and currents. Information on electrical consumption of current and voltage inputs is given in chapter *Inputs* on page 44.

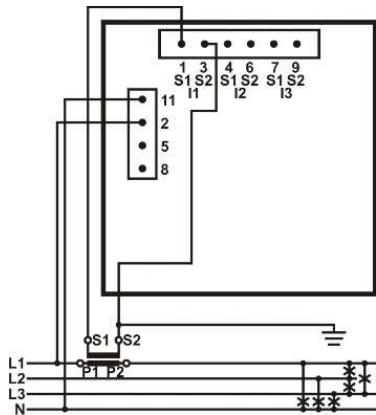


Connection 1b (1W1b);
Single phase connection

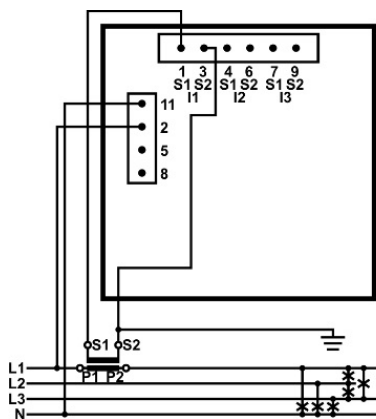


Connection 3b (1W3b)
Three phase, three wire connection with balanced load

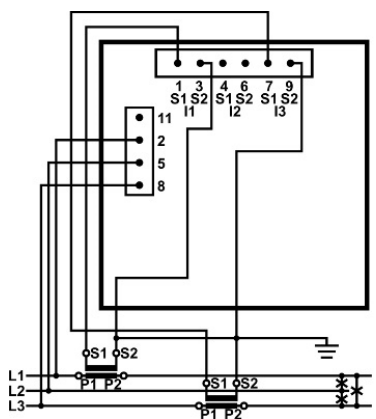

Connection 3u (2W3u)
Three phase, three wire connection with unbalanced load

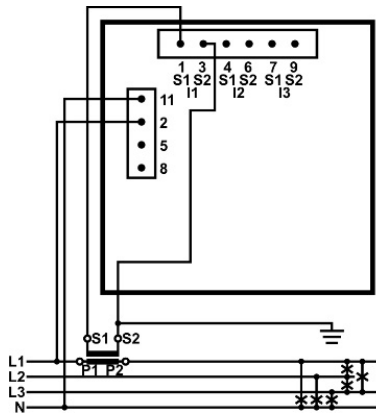

Connection 4b (1W4b)
Three phase, four wire connection with balanced load

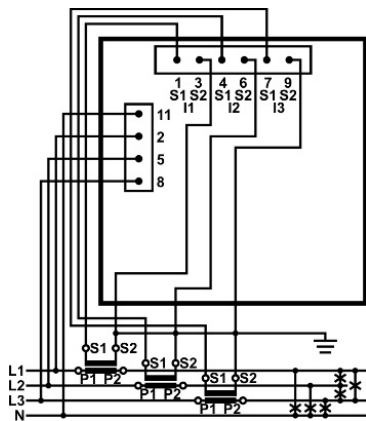

Connection 4u (3W4u)
Three phase, four wire connection with unbalanced load


PLEASE NOTE



Examples of connections are shown without input / output modules and communication. Connection does not depend on a number of built-in modules and communication, and is shown on the device label.

Connection of input/output modules

WARNING!

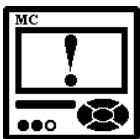





































Check the module features that are specified on the label, before connecting module contacts. Wrong connection can cause damage or destruction of module and/or device.

PLEASE NOTE



Frequency of the tariff input voltage signal should not essentially deviate from the frequency of the measuring input signal. At no signal on the measuring inputs the tariff triggering is not reliable.


Connect module contacts as specified on the label. Examples of labels are given below and describe modules built in the device. Information on electrical properties of modules is given in chapter *Modules* on page 45.

<table border="1"> <thead> <tr> <th colspan="2">2 x Tariff input</th> </tr> </thead> <tbody> <tr> <td colspan="2">230V AC $\pm 20\%$</td> </tr> <tr> <td> T1/2</td> <td>18</td> </tr> <tr> <td> C</td> <td>19</td> </tr> <tr> <td> T3/4</td> <td>20</td> </tr> </tbody> </table>	2 x Tariff input		230V AC $\pm 20\%$		 T1/2	18	 C	19	 T3/4	20	Tariff input module with two tariff inputs for changeover between up to four tariffs.		
2 x Tariff input													
230V AC $\pm 20\%$													
 T1/2	18												
 C	19												
 T3/4	20												
<table border="1"> <thead> <tr> <th colspan="2">INPUT/OUTPUT</th> </tr> </thead> <tbody> <tr> <td colspan="2">2 x Alarm output</td> </tr> <tr> <td colspan="2">40V AC / 35V DC 1A</td> </tr> <tr> <td> A1</td> <td>15</td> </tr> <tr> <td> C</td> <td>16</td> </tr> <tr> <td> A2</td> <td>17</td> </tr> </tbody> </table>	INPUT/OUTPUT		2 x Alarm output		40V AC / 35V DC 1A		 A1	15	 C	16	 A2	17	Relay (alarm) output module with two outputs.
INPUT/OUTPUT													
2 x Alarm output													
40V AC / 35V DC 1A													
 A1	15												
 C	16												
 A2	17												
<table border="1"> <thead> <tr> <th colspan="2">INPUT/OUTPUT</th> </tr> </thead> <tbody> <tr> <td colspan="2">2 x Pulse output</td> </tr> <tr> <td colspan="2">40V AC/DC 30mA</td> </tr> <tr> <td> P1</td> <td>15</td> </tr> <tr> <td> C</td> <td>16</td> </tr> <tr> <td> P2</td> <td>17</td> </tr> </tbody> </table>	INPUT/OUTPUT		2 x Pulse output		40V AC/DC 30mA		 P1	15	 C	16	 P2	17	S0 (pulse) output module with two pulse outputs for energy counters.
INPUT/OUTPUT													
2 x Pulse output													
40V AC/DC 30mA													
 P1	15												
 C	16												
 P2	17												
<table border="1"> <thead> <tr> <th colspan="2">2 x Digital input</th> </tr> </thead> <tbody> <tr> <td colspan="2">230V AC/DC $\pm 20\%$</td> </tr> <tr> <td> D1+</td> <td>18</td> </tr> <tr> <td> C</td> <td>19</td> </tr> <tr> <td> D2+</td> <td>20</td> </tr> </tbody> </table>	2 x Digital input		230V AC/DC $\pm 20\%$		 D1+	18	 C	19	 D2+	20	Digital input module with two digital inputs enables reception of impulse signals.		
2 x Digital input													
230V AC/DC $\pm 20\%$													
 D1+	18												
 C	19												
 D2+	20												

Communication connection

A type of connector depends on ordered communication. RS232 and RS485 communication are equipped with screw terminal connector, USB with USB standard B type terminal and Service USB port with mini-B type terminal.

WARNING!

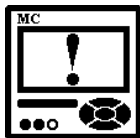

When connecting a communication connector it is necessary to assure which type RS232 or RS485 communication is used. Otherwise the communication module can be damaged or destroyed. See connection diagrams below.

Corresponding data are stated on the instrument label, regarding the selected communication. Connector terminals are marked on the label on the upper side of the instrument. More detailed information on communication is given in chapter *Communication* on page 45.

RS232

RS232 communication is intended for direct connection of the Measuring centre to the personal computer. For proper operation it is necessary to assure the corresponding connection of individual terminals (see table on next page).

RS485

RS485 communication is intended for connection of devices to network where several devices with RS485 communication are connected to a common communication interface. We suggest using one of the *Iskra, d.d.* communication interfaces!

USB

USB communication serves as a fast peer-to-terminal data link. The device is detected by host as a USB 2.0 compatible device. The USB connection is provided through a USB standard Type B connector.

PLEASE NOTE



When MC350 TH is connected to a PC through USB communication for the first time, a user is prompted to install a driver. The driver is integrated in MiQen software or can be downloaded from the *Iskra, d.d.* web page www.iskra.eu. With this driver installed, USB is redirected to a serial port, which should be selected when using MiQen software.

Survey of communication connection

	Connector	Terminals	Position	Data direction	Description
RS232	Screw terminal		21	From	Data transmission (Tx)
			22	-	Grounding (\perp)
			23	To	Data reception (Rx)
RS485	Screw terminal		21	To/From	A
			22	-	Do not connect!
			23	To/From	B
USB	B type		Standard USB 2.0 compatible cable recommended (standard B type plug)		

Connection of power supply

Measuring centre has adaptable power supply. It enables connection to certain AC power supply or universal (AC/DC) power supply. Power supply voltage depends on ordered voltage. Information on electric consumption is given in chapter *Technical data* on page 43.

Regarding power supply voltage specification on the label choose and connect the power supply voltage:

INPUTS	
Current: 5 A	
Voltage: 240 V	
Frequency: 50, 60 Hz	
Connect.: 4u	
Class: 0.5	
SUPPLY	
20...300 V DC	13
48...276 V AC	14
40...65 Hz	
< 5 VA	

Connection of universal power supply to terminals 13 and 14.

INPUTS	
Current: 5 A	
Voltage: 500 V	
Frequency: 50, 60 Hz	
Connect.: 4u	
Class: 0.5	
SUPPLY	
230, 240 V AC	13
40...65 Hz	14
< 5 VA	


Connection of AC power supply to terminals 13 and 14.

FIRST STEPS

Introduction

Instruction for work with measuring centre is given in the following chapters.



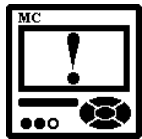

WARNING!



Measuring centre start-up begins after electrical connection. After proper connection it is assured that the user security is not threatened. After correct switch-on and respected safety measures the work with device does not represent any danger for a user.

Basic concepts

Navigation keys and LCD enable application and basic device settings. During the operation some icons can be displayed in upper part of LCD. The significance of icons (from right to left) is explained in the table below.

Icon	Meaning
	Device is locked with a password of the second level (L2). The first level (L1) can be unlocked.
	Device can be wrongly connected at 4u connection. Energy flow direction is different by phases.
	The device supply is too low.
	Clock not set

Example:



Main menu ⇒ Info OK ↑

Info
🔒 Locked
⚡ Wrong connection
⚡ Low supply
⌂ Main menu



Meaning of icons is displayed on LCD in the Information menu.

Installation wizard

After installation and electrical connection, basic parameters have to be set in order to assure correct operation. The easiest way to achieve that is use the Installation wizard. When entering the Installation menu, settings follow one another when the previous one is confirmed. All required parameters shall be entered and confirmed. Exit from the menu is possible when all required settings are confirmed or with interruption (key ← several times) without changes.

Installation wizard menu may vary, depending on built in communication modules. In description below is marked which menu appears for specific option.



PLEASE NOTE



All settings that are performed through the Installation wizard can be subsequently changed by means of the Settings menu or via MiQen by means of communication.



Main menu ⇒ Installation ⇒

The menus follow one after another:

START MENU

Start screen is displayed on LCD.

LANGUAGE

Set device language.

CONNECTION MODE

Choose connection and define load connection.

PRIMARY VOLTAGE

Set primary voltage if a voltage transformer is used.

SECONDARY VOLTAGE

Set secondary voltage if a voltage transformer is used; set voltage of low voltage network if connection is direct.

PRIMARY CURRENT

Set primary current if a current transformer is used.

SECONDARY CURRENT

Set secondary current.

COMMON ENERGY EXPONENT

Define common energy exponent as recommended in table below, where counter divider is at default value 10. Values of primary voltage and current determine proper Common energy exponent. For detailed information see chapter *Energy* on page 27.

Current Voltage	1 A	5 A	50 A	100 A	1000 A
110 V	-1 (100 mWh)	0 (1 Wh)	1 (10 Wh)	1 (10 Wh)	2 (100 Wh)
230 V	0 (1 Wh)	0 (1 Wh)	1 (10 Wh)	2 (100 Wh)	3 (1 kWh)
1000 V	0 (1 Wh)	1 (10 Wh)	2 (100 Wh)	3 (1 kWh)	4 (10 kWh)
30 kV	2 (100 Wh)	2 (100 Wh)	3 (1 kWh)	4 (10 kWh)	4* (10 kWh)

* - Counter divider (MiQen 2.x and above - Individual Counter Resolution) should be at least 100

DEVICE ADDRESS

Set MODBUS address for the device. Default address is 33.

BITS PER SECOND

Set communication rate. Default rate is 115200 b/s.

PARITY

Set communication parity. Default value is None.

STOP BIT

Set communication stop bits. Default value is 2.

Display of device info

A menu is divided into several submenus with data and information about device:

- Welcome screen
- Information
- Meaning of icons


Welcome screen


When entering the information menu, a welcome screen is displayed on LCD showing type designation and name of measuring centre.

 Main menu ⇒ Info OK

Information


Data on a device are collected in the Information menu. They include a serial number, a software version, a hardware version, date of manufacture and a number of operational hours in days, hours and minutes.

 Main menu ⇒ Info OK ↓


 Main menu ⇒ Info OK ↓ ↓

Meaning of icons

All possible icons with their meaning are displayed.

 Main menu ⇒ Info OK ↓ ↓ ↓ ↓

 Example of display of icons with their meaning without active icons and at locked MC:

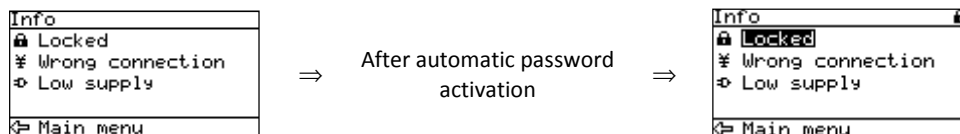

SETTINGS

Introduction

Settings of measuring centre can be done via the front keyboard or with a PC and MiQen software. Setting is easier using MiQen. Basic and simpler settings are accessible via navigation keyboard. For new setting to be activated settings file should be transferred to the device via communication (MiQen) or memory card. Setting done via navigation keyboard comes in to function after confirmation (OK).

MiQen software

MiQen software is a tool for complete monitoring of the measuring instruments. RS485 or RS232 or USB is used for connection with a PC. A user-friendly interface consists of five segments: devices management, instrument settings, real-time measurements, data analysis and software upgrading.



PLEASE NOTE



You can download freeware MiQen from www.iskra.eu.

Devices management

In MiQen it is very easy to manage devices. If dealing with the same device, it can be easily selected from a favourite's line. Use the network explorer to set and explore the devices in serial network or browser for Ethernet devices connected in local Ethernet network. Also setting of communication parameters to establish communication with a single device can easily be done.

Device settings

Multi Register Edit technology assures a simple modification of settings that are organized in a tree structure. Besides transferring settings into the device, storing and reading from the setting files and memory cards are also available.

Real-time measurements

All supported measurements can be seen in real time in a table or graphical form. For further processing of the results of measurements, it is possible to set a recorder on active device that will record and save selected measurements to MS Excel .csv file format.

Data analysis

Analysis can be performed for the devices with a built-in memory. Recorded quantities can be monitored in a tabular or a graphical form. The events that triggered alarms can be analysed or a report on supply voltage quality can be made. All data can be exported to MS Excel worksheets.

Software upgrading

Always use the latest version of software, both MiQen and software in the device. The program automatically informs you about available upgrades that can be transferred and used for upgrading.




PLEASE NOTE



More information about MiQen software can be found in MiQen Help system!

PC MiQen 2.x user interface

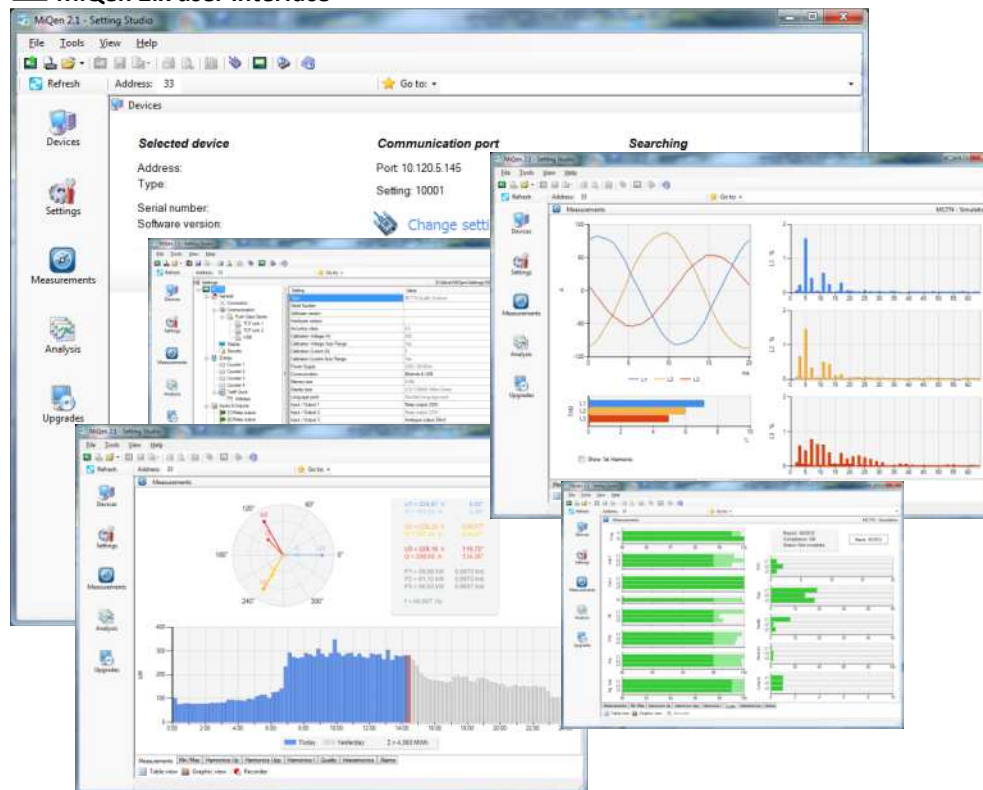

Setting procedure

Before setting the instrument by means of MiQen, the current settings should be read first. Reading is available either via communication or from a file (stored on a PC local disk). A setting structure that is similar to a file structure in an explorer is displayed in the left part of the MiQen setting window. Available settings of that segment are displayed in the right part by clicking any of the stated parameters.

General settings

General settings are essential for measuring centre. They are divided into four additional sublevels (Connection, Communication, Display and Security).

Description and Location PC

These two parameters are intended for easier recognition of a certain unit. They are especially used for identification of the device or location on which measurements are performed.

Average interval

The averaging interval defines a refresh rate of measurements on LCD and communication.

It is used also as averaging interval for minimum and stored in recorder and actual alarm value calculation for alarm triggering.

- Shorter average interval means better resolution in minimum and maximum value in to recorded period detection and faster alarm response. Also data presented in display will refresh faster.
- Longer average interval means lower minimum and maximum value in recorded period detection and slower alarm response (alarm response can be delayed also with Compare time delay setting – See chapter *Alarms* on page 32). Also data on display will refresh slower.

Language


Set language on LCD. When language is changed from or to Russian, characters of the password are changed too. For overview of character translation see chapter *Password and language* on page 27.



Main menu ⇒ Settings ⇒ General ⇒ Language



PLEASE NOTE

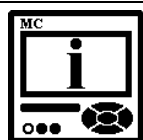

If a wrong language is set, a menu of languages can be displayed by simultaneous pressing up and down keys.

Temperature unit

Choose a unit for temperature display.



Main menu ⇒ Settings ⇒ General ⇒ Temperature unit

Date format

Set a date format.



Main menu ⇒ Settings ⇒ Date & Time ⇒ Date format

Date and time

Set date and time of the device. Setting is important for correct memory operation, maximal values (MD), etc.



Main menu ⇒ Settings ⇒ Date & Time ⇒ Date / Time

Auto Summer/Winter time

If Yes is chosen, time will be automatically shifted to a winter or a summer time, regarding the time that is momentarily set.



Main menu ⇒ Settings ⇒ Date & Time ⇒ Automatic S/W time

Maximum demand (MD) time constant

The instrument provides maximum demand values based on a thermal function. Thermal function time constant can be selected via keyboard or via communication.



Main menu ⇒ Settings ⇒ General ⇒ MD mode / MD time constant

THERMAL FUNCTION

A thermal function assures exponent thermal characteristic based on simulation of bimetal meters. Maximal values and time of their occurrence are stored in device. A time constant (t. c.) can be set from 1 to 255 minutes and is 6 – time thermal time constant (t. c. = 6 * thermal time constant).


Example:

Mode: Thermal function

Time constant: 8 min.

Current MD and maximal MD: Reset at 0 min.

Thermal function

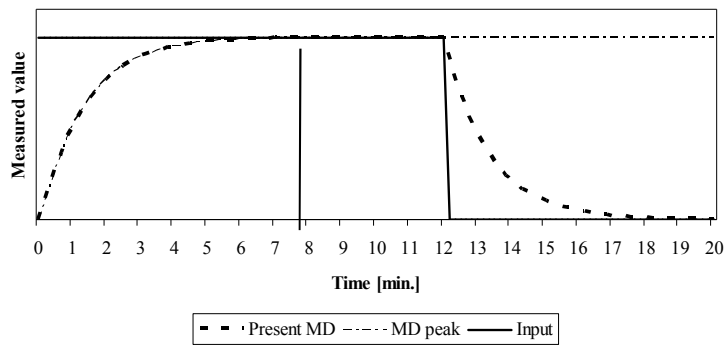

Starting current for PF and PA (mA) PC

At all measuring inputs noise is usually present. It is constant and its influence on the accuracy is increased by decreasing measuring signals. It is present also when measuring signals are not connected and occurs at all further calculations as very sporadic measurements. By setting a common starting current, a limit of input signal is defined where measurements and all other calculations are still performed.

Starting current for all powers (mA) PC

Noise is limited with a starting current also at measurements and calculations of powers.

Starting voltage for SYNC PC

If all voltages are less than Starting voltage for SYNC, than the current inputs are used for synchronisation. If all currents are less than Starting current for PF and PA, than the synchronisation is stopped and the frequency result is 0 Hz

Reactive power and energy calculation PC

User can select between two different principles of reactive power and energy calculation:

Standard method:

With this method a reactive power and energy are calculated based on assumption that all power (energy) that is not active is reactive.

$$Q^2 = S^2 - P^2$$

This means also that all higher harmonics (out of phase with base harmonic) will be measured as reactive power (energy).

Delayed current method:

With this method, reactive power (energy) is calculated by multiplication of voltage samples and delayed current samples (see chapter *Equations* on page 58):

$$Q = U \times I|_{+90^\circ}$$

With this method, reactive power (energy) represents only true reactive component of apparent power (energy).

Connection




PLEASE NOTE



Settings of connections shall reflect actual state otherwise measurements are not valid.

Connection

When connection is selected, load connection and the supported measurements are defined (see chapter *Survey of supported measurements regarding Connection mode* on page 18).

 Main menu ⇒ Settings ⇒ Connection ⇒ Connection mode

Setting of current and voltage ratios

Before setting current and voltage ratios it is necessary to be familiar with the conditions in which device will be used. All other measurements and calculations depend on these settings. Up to five decimal places can be set (up / down). To set decimal point and prefix (up / down) position the cursor (left /right) to last (empty) place or the decimal point.

Settings range	VT primary	VT secondary	CT primary	CT secondary
Maximal value	1638.3 kV	13383 V	1638.3 kA	13383 A
Minimal value	0.1 V	1 mV	0.1 A	1 mA

 Main menu ⇒ Settings ⇒ Connection ⇒ VT primary / VT secondary / CT primary / CT secondary

Used voltage and current range

Setting of the range is connected with all settings of alarms, where 100% represents 500 V and 5A. In case of subsequent change of the range, alarms settings shall be correspondingly changed, as well.

Nominal frequency

A valid frequency measurement is within the range of nominal frequency ± 32 Hz. This setting is used for alarms only.

Wrong connection warning

If all phase currents (active powers) do not have same sign (some are positive and some negative) and/or if phase voltages and phase currents are mixed, the warning will be activated if this setting is set to YES. This warning is seen only on remote display.

Energy flow direction

This setting allows manual change of energy flow direction (IMPORT to EXPORT or vice versa) in readings tab. It has no influence on readings sent to communication or to memory.

CT connection

If this setting is set to REVERSED it has the same influence as if CT's would be reversely connected. All power readings will also change its sign.

Serial communication

Serial Communication

They define parameters that are important for the operation in RS485 network or connections with PC via RS232 communication. Factory settings of communication are #33\115200,n,8,2 (address 1 to 247\rate 2400 to 115200 b/s, parity, data bits, stop bit).

 Main menu ⇒ Settings ⇒ Communication ⇒

USB communication


USB Communication

Has no setting. Device is automatically recognized in Windows environment if device driver has been correctly installed. For more detailed information how to handle device with USB communication use Help section in MiQen software.

Display


Display settings

A combination of setting of the contrast and back light defines visibility and legibility of a display. Display settings shall be defined in compliance with the conditions in which it will be monitored. Economizing mode switches off back light according to the set time of inactivity.

 Main menu ⇒ Settings ⇒ LCD ⇒ Contrast / Back light / Back light time off

Demo cycling period

It defines time in seconds for each displayed screen of measurements on LCD.

 Main menu ⇒ Settings ⇒ LCD ⇒ Demo cycling period

Settings of customized screens

For easier and faster survey of measurements that are important for the user, three settings of customized screens are available. Each customized screen displays three measurements. When setting customized screens the designations are displayed in shorter form, with up to 4 characters. For survey of all designations see chapter *Survey of supported measurements regarding Connection* on page 11.

Example:


Desired result:

Customized screen 1	Customized screen 2	Customized screen 3
Phase voltage 1	Total current	Power angle (U_1-I_1)
Phase current 1	Neutral current	Frequency
Phase power 1	Average current	THD of current I_1


Setting:

Main menu ⇒ Settings ⇒ LCD ⇒ Custom screen 1 / 2 / 3


Customized screen 1

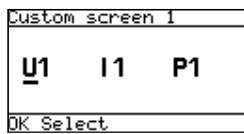


Customized screen 2

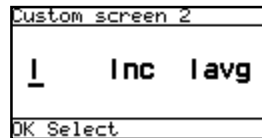


Customized screen 3

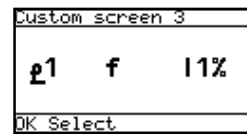


Main menu ⇒ Measurements ⇒ Present values ⇒ Custom OK

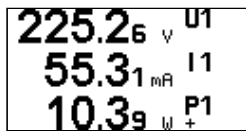

⇔

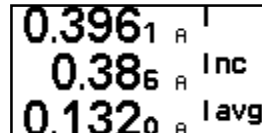

⇔

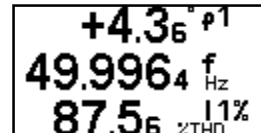

Security

Settings parameters are divided into four groups regarding security level:

- 1 At the lowest level (PL0), where a password is not required, parameters of LCD can be set: language, contrast and LCD back light.
- 2 At the first level (PL1), settings of a real time clock can be changed and energy meters and MD can be reset.
- 3 At the second level (PL2), the access to all data that are protected with the first level (PL1) and setting of all other parameters in the »SETTINGS« menu are available.
- 4 A backup password (BP) is used if passwords at levels 1 (PL1) and 2 (PL2) have been forgotten, and it is different for each device (depending on a serial number of the meter). The BP password is available in the user support department in *Iskra, d.d.*, and is entered instead of the password PL1 or/and PL2. Do not forget to state the meter serial meter when contacting the personnel in *Iskra, d.d.*



PLEASE NOTE



A serial number of device is stated on the label, LCD (see example below) and is also accessible with MiQen software.

The access to the device serial number via a keyboard

Example:


Main menu ⇒ Info OK ↓



OK



↓

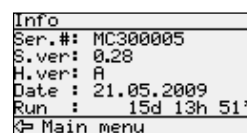

Password setting


A password consists of four letters taken from the British alphabet from A to Z. When setting a password, only the letter being set is visible while the others are covered with *.

A password of the first (L1) and the second (L2) level is entered, and time of automatic activation is set.

Main menu ⇒ Settings ⇒ Security ⇒ Password level 1 / Password level 2 / Password lock time


Password modification

A password is optionally modified; however, only that password can be modified to which the access is unlocked at the moment.

 Main menu ⇒ Settings ⇒ Security ⇒ Password level 1 / Password level 2

Password disabling

A password is disabled by setting the "AAAA" password.

 Main menu ⇒ Settings ⇒ Security ⇒ Password level 1 / Password level 2 ⇒ "AAAA" OK



PLEASE NOTE



A factory set password is "AAAA" at both access levels (L1 and L2). This password does not limit access.

Password and language


Language change is possible without password input. When language is changed from or to Russian or Hebrew, character transformation has to be taken in to account. Character transformation table (English or Russian alphabet) is stated below.

English	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
Russian	А	Б	В	Г	Д	Е	Ж	З	И	Й	К	Л	М	Н	О	П	Р	С	Т	У	Ф	Х	Ц	Ч	Ш	Щ

Energy - counters



WARNING!

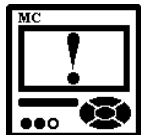

Before modification, all energy counters should be read or if energy values are stored in recorders, recorder should be read with MiQen software or stored on Memory card to assure data consistency for the past.

After modification of energy parameters, the energy meters (counters) should be reset. All recorded measurements from this point back might have wrong values so they should not be transferred to any system for data acquisition and analysis. Data stored before modification should be used for this purpose.

Active tariff

When active tariff is set, one of the tariffs is defined as active; switching between tariffs is done either with a tariff clock or a tariff input. For the operation of the tariff clock other parameters of the tariff clock that are accessible only via communication or Memory card must be set correctly.

Common Energy Exponent (Common Energy Counter Resolution – MiQen 2.x and above)

Common energy exponent defines minimal energy that can be displayed on the energy counter. On the basis of this and a counter divider, a basic calculation prefix for energy is defined (-3 is 10⁻³Wh = mWh, 4 is 10⁴Wh = 10 kWh). A common energy exponent also influences in setting a number of impulses for energy of pulse output or alarm output functioning as an energy meter.

Define common energy exponent as recommended in table below, where counter divider is at default value 10. Values of primary voltage and current determine proper Common energy exponent.

In MiQen setting software version 2.x and above, this setting parameter is renamed in Common Energy Counter Resolution. Also setting values are changed to give user better perspective of represented value.

In table below, new setting values are quoted in parenthesis.

Current Voltage	1 A	5 A	50 A	100 A	1000 A
110 V	-1 (100 mWh)	0 (1 Wh)	1 (10 Wh)	1 (10 Wh)	2 (100 Wh)
230 V	0 (1 Wh)	0 (1 Wh)	1 (10 Wh)	2 (100 Wh)	3 (1 kWh)
1000 V	0 (1 Wh)	1 (10 Wh)	2 (100 Wh)	3 (1 kWh)	4 (10 kWh)
30 kV	2 (100 Wh)	2 (100 Wh)	3 (1 kWh)	4 (10 kWh)	4* (10 kWh)

* - Counter divider (MiQen 2.x and above - Individual Counter Resolution) should be at least 100

Counter divider (Individual counter Resolution – MiQen 2.x and above)

The counter divider additionally defines precision of a certain counter, according to settings of common energy exponent.

An example for 1kW of consumed active energy in the first tariff:

Common energy exponent	0	2	2
Counter divider	1	1	100
Example of result, displayed	2.577 kWh	0.2577 MWh	25.77 MWh

Tariff clock


Basic characteristics of a program tariff clock:


- 4 tariffs (T1 to T4)
- Up to 4 time spots in each Day program for tariff switching
- Whichever combination of valid days in a week or holidays for each program
- Combining of day groups (use of over 4 time spots for certain days in a week)
- Separate settings for 4 seasons a year
- Up to 20 settable dates for holidays

OPERATION OF INTERNAL TARIFF CLOCK


Tariff status is displayed in the Info menu.

Example of display for selected Active tariff:


 Main menu ⇒ Info OK ↓ ↓ ↓ ⇒

Tariff status
Season: 1
Day programs
P1 -- -- --
Tariff: T3
 Info

or

Tariff status
Selected: T2
 Info

or

Tariff status
Tariff input
Selected: T1
 Info

Day program sets up to 4 time spots (rules) for each day group in a season for tariff switching.

A date of real time clock defines an active period. An individual period is active from the period starting date to the first next date of the beginning of other periods.


The order of seasons and starting dates is not important, except when two dates are equal. In that case the season with a higher successive number has priority, while the season with a lower number will never be active.

If no starting date of a season is active, the active period is 1.

If the present date is before the first starting date of any period, the period is active with the last starting date.

Example of settings:

Season	Season start day
Season 1:	15.02
Season 2:	30.10
Season 3:	-
Season 4:	01.06
Date	Active season
01.01. - 14.02.	2 (last in the year)
15.02. - 31.05.	1
01.06. - 29.10.	4
30.10. - 31.12.	2

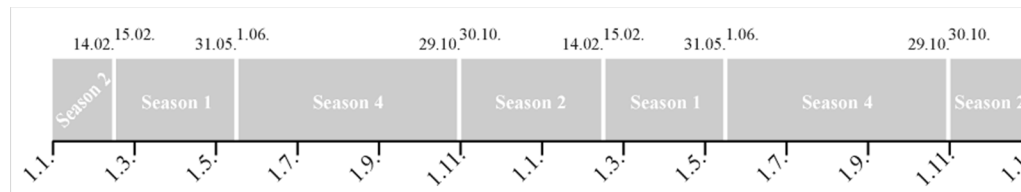

Days in a week and selected dates for holidays define time spots for each daily group in a period for tariff switching. Dates for holidays have priority over days in a week.

When the real time clock date is equal to one of a date of holidays, tariff is switched to holiday, within a period of active daily group with a selected holiday.

If there is no date of holidays that is equal to the real time clock date, all daily groups with the selected current day in a week are active.

Several daily groups can be active simultaneously, which enables more than 4 time spots in one day (combine of day programs). **If the time spot is not set for a certain day, tariff T1 is chosen.**

Time of a real time clock defines an active tariff regarding currently active day program. A selected tariff T1 to T4 of individual time spot is active from the time of the time spot to the first next time of the remaining time spots.

The order of time spots is not important, except when two times are equal. In that case the time with a higher successive number has priority (if several time spots are active, times of higher time spots have higher successive numbers), while the time spot with a lower number will never be active.

If current time is before the first time of any time spot of active spots, the time spot with the last time is chosen.

If no time spot of active programs is valid, tariff T1 is chosen.

Time selected tariff T1 to T4 or fixed selected tariff (via communication) defines activity of an energy counter.

Counter measured quantity ^{PC}

For each of four (4) counters different measured quantity can be selected. User can select from a range of predefined options referring to measured total energy or energy on single phase. Or can even select its own option by selecting appropriate quantity, quadrant, absolute or inverse function.

To energy counter also pulse / digital input can be attached. In this case Energy counter counts pulses from an outside source (water, gas, energy... meter).

Inputs and outputs

MC350 TH can be equipped with different I/O. For its technical specifications see chapter *Technical data* on page 43.

For I/O 1 and 2 following options are available.

Module 1 - Outputs: There are two different output modules.

- Pulse output (solid state)
- Relay output (relay)

Module 2 - Inputs: There are two different input modules.

- Digital input
- Tariff input

Tariff and digital input can be ordered as a different hardware types with different voltage levels.

All modules have double input or output and are in MiQen software presented as two separate modules.

An relay output and a pulse output can also be selected via a keyboard. When selecting settings of energy and quadrants for a certain counter, only present selection is possible, while more demanding settings are accessible via communication.

Pulse (S0) module

It is a solid state, optocoupler open collector switch. Its main intention is to be used as a pulse output for selected energy counter, but can also be used as an alarm or general purpose digital output.

For description of output functionality see chapter Functions of Digital output (Pulse and Relay) modules below.

Relay (alarm) module

It is a relay switch. Its main intention is to be used as an alarm output, but can also be used as a pulse or general purpose digital output.

A parallel RC filter with time constant of at least 250 μs ($R \cdot C \geq 250 \mu\text{s}$) should be used in case of a sensitive pulse counter. RC filter attenuates relay transient signals.

For description of output functionality see chapter Functions of Digital output (Pulse and Relay) modules below.


Functions of output modules (Pulse and Relay)

To Digital outputs, Pulse and Relay, different functions can be attached. All can be set with MiQen software.

PULSE OUTPUT OF ENERGY COUNTER

A corresponding energy counter is defined to a pulse output. A number of pulses per energy unit, pulse length, and a tariffs in which output is active are set.

WARNING!

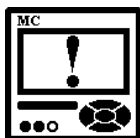

Pulse parameters are defined by EN 62053-31 standard. In chapter Calculation of recommended pulse parameters, below a simplified rule is described to assist you in setting the pulse output parameters.



Main menu \Rightarrow Settings \Rightarrow Inputs/Outputs \Rightarrow I/O 1 / 2 / 3 / 4 \Rightarrow Setting of pulse output OK

The pulse module can also function as an alarm output with maximum current load 30 mA.

CALCULATION OF RECOMMENDED PULSE PARAMETERS

Number of pulses per energy unit should be in certain limits according to expected power. If not so the measurement from pulse output can be incorrect. Settings of current and voltage transformers can help in estimation of expected power.

Principle described below for pulse setting, where e is prefix, satisfies EN 62053-31: 2001 standards pulse specifications:

$$1.5 \dots 15 \text{ eW} \rightarrow 100 \text{ p/1 eWh}$$

Examples:

Expected power	→	Pulse output settings
150 - 1500 kW	→	1 p/1kWh
1.5 - 15 MW	→	100 p/1MWh
15 - 150 MW	→	10 p/1MWh
150 - 1500 MW	→	1 p/1MWh

CALCULATION OF RECOMMENDED PULSE PARAMETERS

If Digital output is defined as an Alarm output, its activity (trigger) is connected to Alarm groups. Multiple alarm groups can be attached to it and different signal shapes defined. For more information on how to define alarm groups, see chapter *Alarms* on page 32.


Alarm groups connected to a specific output module can also be defined via keyboard.



Main menu ⇒ Settings ⇒ Inputs/Outputs ⇒ V/I 1 / 2 / 3 / 4 ⇒ Setting of alarm output OK

SIGNAL SHAPE:

- Normal – a relay is closed until condition for the alarm is fulfilled.
- Normal inverse – a relay is open until condition for the alarm is fulfilled.
- Latched – a relay is closed when condition for the alarm is fulfilled, and remains closed until it is reset via communication.
- Latched inverse – a relay is opened when condition for the alarm is fulfilled, and remains closed until it is reset via communication.
- Pulsed – an impulse of the set length is sent always when condition for the alarm is fulfilled.
- Pulsed inverse – a pause of the set length is sent always when condition for the alarm is fulfilled. Otherwise relay is closed.
- Always switched on / off (permanent) – A relay is permanently switched on or switched off irrespective of the condition for the alarm.

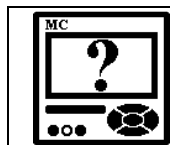

This possibility of permanent alarm setting enables remote control via communication.

Digital input module

Module has no settings. General purpose is to collect digital signals from various devices, such as (intrusion detection relay, different digital signals in transformer station, industry ...). It is available in three different hardware versions.

When used in DC mode it can also be used as a pulse counter from external meters (water, gas, heat ...). Its value can be assigned to any of four energy counters (see chapter *Energy* on page 27).

Tariff input module

TARIFF INPUT

Has no setting. It operates by setting active tariff at a tariff input (see chapter *Tariff clock* on page 28). The instrument can have maximal one module with 2 tariff inputs only. With the combination of 2 tariff inputs maximal 4 tariffs can be selected.

ACTIVE TARIFF SELECTION TABLE:

Active tariff	Signal presence on tariff input	
	Input T1/T2	Input T3/T4
Tariff 1	0	0
Tariff 2	1	0
Tariff 3	0	1
Tariff 4	1	1

Alarms

Alarms are used for alarming exceeded set values of the measured quantities.


Alarms setting

Measuring centre supports alarm functionality. 16 alarms divided in 2 groups (2 x 8 alarms) can be set. For each group of alarms a time constant of maximal values in thermal mode, a delay time and alarm deactivation hysteresis can be defined.

Quantity, value (a current value or a MD – thermal function) and a condition for alarm switch-on are defined for every individual alarm.

MC350 TH also supports storing of alarms in internal memory.

WARNING!

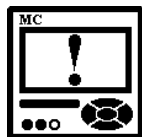

New values of alarms are calculated in percentage at modification of connection settings.

Device evident all triggered alarms and stores it in internal RAM. Statistic is valid since last power supply On and could be reset with MiQen software (See chapter *Reset operations* on page 35)


Types of alarms

VISUAL ALARM

When alarm is switched on, a red LED on the meter front side is blinking (see figure shown on next page).

ALARM OUTPUT (PULSE)

According to the alarm signal shape the output relay will behave as shown on next page.

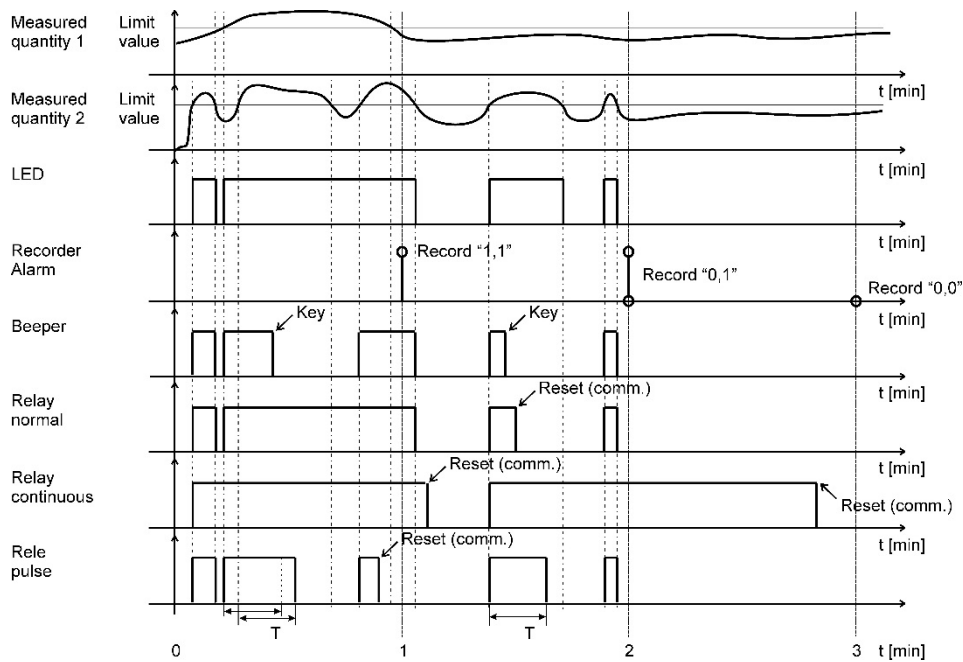

Memory

Measurements and alarms can be stored in a built in 8MB flash memory. All records stored in memory are accessible via communication with MiQen software.

Memory division

MC memory is divided into 3 partitions which size is defined by the user. Measurements are stored in A and B partitions, while all alarms that occurred are recorded in an alarm partition.

Memory operation

Memory functions in a cyclic mode in compliance with the FIFO method. This means that only the latest records are stored in the memory that will replace the oldest ones. A number of stored data or a storing period depends on selected partition size, a number of recorded quantities and time of division sampling. Occupancy of partitions is shown in the Information menu (see chapter *Display* of device info on page 25).

Memory clearing

There is usually no need to clear the memory, because it works in cyclic mode. If you want to clear memory data anyway, the data storing must be stopped first. Read the device settings with MiQen and set "Recorder state" in Memory setting group to stopped. Download changes to the device and open Memory info form and then click on Clear memory button. Select memory partitions to be cleared on Memory clearing form and click on OK button. Set "Recorder state" setting back to active.

WARNING!

It is strongly advised to download recorder values before applying any changes to recorder or changes of settings for energy, type of connection, current and voltage transformer settings, used current and voltage ranges ...
 These changes might have impact on recorded history so data might no longer be valid.

Recorders A and B setting

Recorders settings:

Memory division: Set desired size of memory partition for each recorder and alarms.

Recorder A/B/Alarm state: Start/stop recording.

Recorder A/B mode: Set function mode for recorder. Select between Standard recorder (32bit) or Standard recorder (16bit). Some things need to be taken in to consideration using one or another type.

Using **Standard recorder (16bit)**

- almost double amount of data can be stored compared to 32bit recorder
- data are stored in manufacturer defined formats (reconstruction depends on device setting)
- Energy counter resolution needs to be set correctly in order for Energy counter not to overflow; in this format differential value of a counter in recording period should not reach value of 20000; see table for correct Energy counter resolution setting in chapter Energy – counters on page 27

Using **Standard recorder (32bit)**

- smaller amount of data can be stored
- all data but Energy counters are stored in IEEE 754 Floating point format; Energy counters are stored in Signed Long integer format

Separately, for each of the recorders, settings can be set:

Storage interval: sets a time interval for readings to be written to a recorder

Recorded quantities: for each of 16 measurements, which are to be recorded it is possible to set a required value and its representation within storage interval (minimum, maximum ...).

Parameter: here monitoring quantity can be selected from a list of supported measurements.


Value: representation of a value within set monitoring interval can be set to different conditions.

- Average value represents calculated average value
- Actual value represents value of recorded quantity at sampling intervals
- Minimum and Maximum value represents minimum or maximum of recorded quantity in selected storage interval. Minimum or maximum in this case represents averaged value according to average interval selected in *General settings* (see page 21).

Reset operations

Reset energy counters (E1, E2, E3, E4)


All or individual energy meters are reset.

 Main menu ⇒ Resets ⇒ Energy counters ⇒ All energy counters / Energy counter E1 / E2 / E3 / E4 OK

Reset maximal MD values

THERMAL MODE


Current and stored MDs are reset.

 Main menu ⇒ Resets ⇒ MD values ⇒ No / Yes

Reset the last MD period

THERMAL MODE

Current MD value is reset.

 Main menu ⇒ Resets ⇒ Last period MD ⇒ No / Yes

Alarm relay (1 or 2) Off

When using MiQen, each alarm output can be reset separately. On device (manually) only all alarm outputs together can be reset.

All alarms are reset.

 Main menu ⇒ Reset ⇒ Reset alarm output ⇒ No / Yes

Reset alarm statistic

Clears the alarm statistic that is evidenced since last power supply On.

MEASUREMENTS

Introduction

In the following chapters operation of the device is explained more in detail.

Available connections

Different electric connections are described more in detail in chapter *Electric connection* on page 13. Connections are marked as follows:

- Connection 1b (1Wb) – Single phase connection
- Connection 3b (1W3b) – Three phase, three wire connection with balanced load
- Connection 4b (1W4b) – Three phase, four wire connection with balanced load
- Connection 3u (2W3u) – Three phase, three wire connection with unbalanced load
- Connection 4u (3W4u) – Tree phase, four wire connection with unbalanced load



PLEASE NOTE



Measurements support depends on connection mode and the device type.
Calculated measurements are only informative.

Survey of supported measurements regarding connection mode

All measurements, with designations can be displayed on customized screens.

	Basic measurements	Designat.	Unit	1b	3b	3u	4b	4u
Phase	Voltage U ₁	U1	V	●	x	x	●	●
	Voltage U ₂	U2	V	x	x	x	○	●
	Voltage U ₃	U3	V	x	x	x	○	●
	Average voltage U [~]	U _A	V	x	x	x	○	●
	Current I ₁	I1	A	●	●	●	●	●
	Current I ₂	I2	A	x	○	●	○	●
	Current I ₃	I3	A	x	○	●	○	●
	Current I _n	I _{nc}	A	x	○	○	○	●
	Total current I _t	I	A	●	○	○	○	●
	Average current I _a	I _{avg}	A	x	○	○	○	●
	Active power P ₁	P1	W	●	x	x	●	●
	Active power P ₂	P2	W	x	x	x	○	●
	Active power P ₃	P3	W	x	x	x	○	●
	Total active power P _t	P	W	●	●	●	○	●
	Reactive power Q ₁	Q1	var	●	x	x	●	●
	Reactive power Q ₂	Q2	var	x	x	x	○	●
	Reactive power Q ₃	Q3	var	x	x	x	○	●
Total reactive power Q _t	Q	var	●	●	●	○	●	

● - serial ○ - option x - not supported

	Basic measurements	Designat.	Unit	1b	3b	3u	4b	4u
Phase	Apparent power S_1	S1	VA	●	×	×	●	●
	Apparent power S_2	S2	VA	×	×	×	○	●
	Apparent power S_3	S3	VA	×	×	×	○	●
	Total apparent power S_t	S	VA	●	●	●	○	●
	Power factor PF_1	PF1/ePF1		●	×	×	●	●
	Power factor PF_2	PF2/ePF2		×	×	×	○	●
	Power factor PF_3	PF3/ePF3		×	×	×	○	●
	Total power factor PF^{\sim}	PF/ePF		●	●	●	○	●
	Power angle ϕ_1	ϕ_1	°	●	×	×	●	●
	Power angle ϕ_2	ϕ_2	°	×	×	×	○	●
	Power angle ϕ_3	ϕ_3	°	×	×	×	○	●
	Total power angle ϕ^{\sim}	ϕ	°	●	●	●	○	●
	THD of phase voltage U_{f1}	U1%	%THD	●	×	×	●	●
	THD of phase voltage U_{f2}	U2%	%THD	×	×	×	○	●
	THD of phase voltage U_{f3}	U3%	%THD	×	×	×	○	●
	THD of phase current I_1	I1%	%THD	●	●	●	●	●
THD of phase current I_2	I2%	%THD	×	○	●	○	●	
THD of phase current I_3	I3%	%THD	×	○	●	○	●	
Phase-to-phase	Phase-to-phase voltage U_{12}	U12	V	×	●	●	○	●
	Phase-to-phase voltage U_{23}	U23	V	×	●	●	○	●
	Phase-to-phase voltage U_{31}	U31	V	×	●	●	○	●
	Average phase-to-phase voltage (U_{ff})	U_{Δ}	V	×	●	●	○	●
	Phase-to-phase angle ϕ_{12}	ϕ_{12}	°	×	×	×	○	●
	Phase-to-phase angle ϕ_{23}	ϕ_{23}	°	×	×	×	○	●
	Phase-to-phase angle ϕ_{31}	ϕ_{31}	°	×	×	×	○	●
	THD of phase-to-phase voltage THD_{U12}	U12%	%THD	×	●	●	○	●
	THD of phase-to-phase voltage THD_{U23}	U23%	%THD	×	●	●	○	●
	THD of phase-to-phase voltage THD_{U31}	U31%	%THD	×	●	●	○	●
Energy	Counters 1–4	E1, E2,	Wh VAh	●	●	●	●	●
	Active tariff	Atar		●	●	●	●	●
Max. values MD	MD current I_1	I1	A	●	●	●	●	●
	MD current I_2	I2	A	×	○	●	○	●
	MD current I_3	I3	A	×	○	●	○	●
	MD active power P (positive)	P+	W	●	●	●	●	●
	MD active power P (negative)	P-	W	●	●	●	●	●
	MD reactive power Q-L	Q_{L}	var	●	●	●	●	●
	MD reactive power Q-C	Q_{C}	var	●	●	●	●	●
	MD apparent power S	S	VA	●	●	●	●	●

● - serial ○ - option × - not supported




PLEASE NOTE



Basic and MD measurements have designations for recognition via LCD. In this way they can be selected via LCD for a display on customized screens.

WARNING!

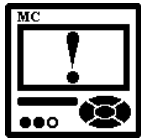

When, due to mode of connection, unsupported measurement is selected for customized screen an undefined value is displayed.

Explanation of basic concepts

Sample factor – MV



A device measures all primary quantities with sample frequency which cannot exceed a certain number of samples in a time period. Based on these limitations (65 Hz:128 samples) a sample factor is calculated. A sample factor (M_V), depending on frequency of a measured signal, defines a number of periods for a measurement calculation and thus a number of harmonics considered in calculations.

Average interval – MP

Due to readability of measurements from LCD and via communication, an Average interval (M_P) is calculated with regard to the measured signal frequency. The Average interval (see chapter *Average interval* on page 38) defines refresh rate of displayed measurements based on a sampling factor.

Power and energy flow

Figures below show a flow of active power, reactive power and energy for 4u connection.

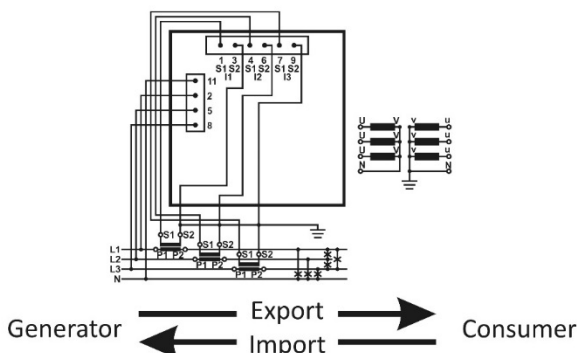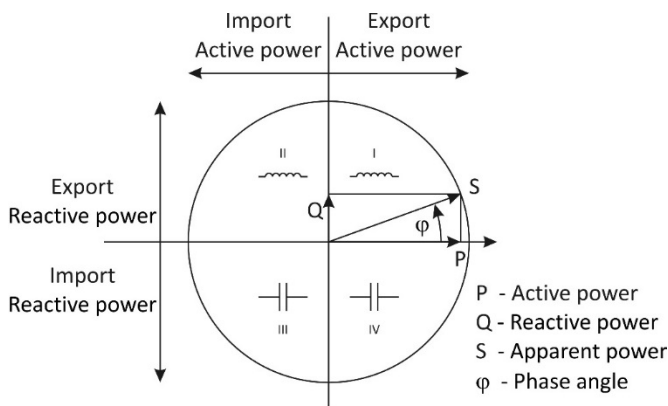

PLEASE NOTE



Display of energy flow direction can be adjusted to connection and operation requirements by changing the *Energy flow direction* settings in general / connection (see page 24).

Present values



PLEASE NOTE



Since measurement support depends on connection mode some display groups can be combined in to one, within Measurements menu.

Calculation and display of measurements

This chapter deals with capture, calculation and display of all supported quantities of measurement. Only the most important equations are described; however, all of them are shown in chapter *Equations* on page 58 with additional descriptions and explanations.



PLEASE NOTE




Calculation and display of measurements depend on the device type and connection used. For more detailed information see *chapters Survey of supported measurements regarding connection mode* on page 36.

For entry and quitting measurement display menu, the OK key is used. Direction keys (left / right / up / down) are used for passing between displays as show in example below.

Example – 4u connection mode:



Main menu Main menu ⇒ Measurements ⇒ Present values ⇒ Voltage OK

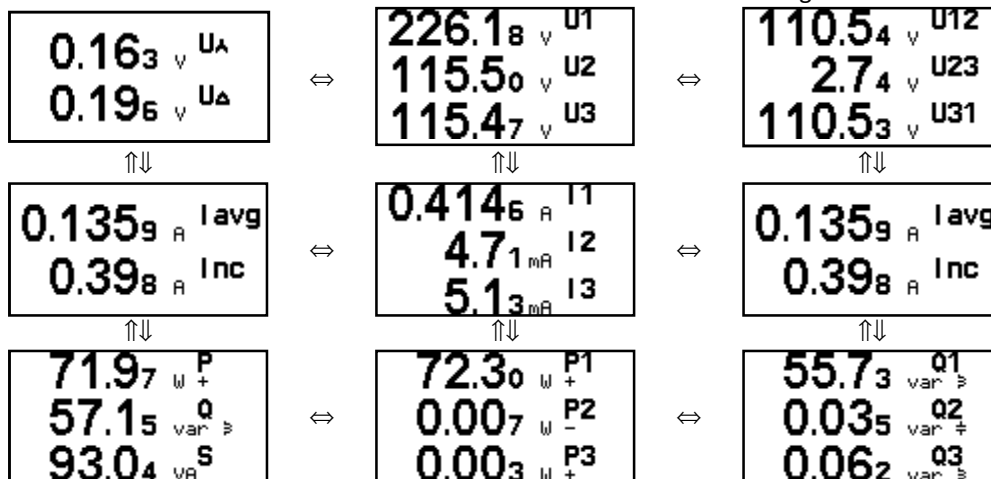


Voltage

Instrument measures real effective (rms) value of all phase voltages (U_1, U_2, U_3) connected to the meter. Phase-to-phase voltages (U_{12}, U_{23}, U_{31}), average phase voltage (U_f) and average phase-to-phase voltage (U_a) are calculated from measured phase voltages (U_1, U_2, U_3).

$$U_f = \sqrt{\frac{\sum_{n=1}^N u_n^2}{N}} \quad U_{xy} = \sqrt{\frac{\sum_{n=1}^N (u_{xn} - u_{yn})^2}{N}}$$

All voltage measurements are available via communication, serial and customized displays on LCD.


 Main menu \Rightarrow Measurements \Rightarrow Present values \Rightarrow Voltage OK

Current

The device measures real effective (rms) value of phase currents, connected to current inputs. Neutral current (I_n), average current (I_a) and a sum of all phase currents (I_i) are calculated from phase currents.

$$I_{RMS} = \sqrt{\frac{\sum_{n=1}^N I_n^2}{N}}$$

All current measurements are available via communication, serial (except I_i) and customized displays on LCD.

 Main menu \Rightarrow Measurements \Rightarrow Present values \Rightarrow Current OK

Active, reactive and apparent power


Active power is calculated from instantaneous phase voltages and currents. All measurements are seen via communication or are displayed on LCD. For more detailed information about calculation see chapter *Equations* on page 58.

 Main menu \Rightarrow Measurements \Rightarrow Present values \Rightarrow Power OK

Power factor and power angle


Power angle is calculated as quotient of active and apparent power for each phase separately ($\cos\phi_1, \cos\phi_2, \cos\phi_3$) and total power angle ($\cos\phi_t$). A symbol for a coil represents inductive load and a symbol for a capacitor represents capacitive load. For correct display of PF via analogue output and application of the alarm, ePF (extended power factor) is applied. It illustrates power factor with one value as described in the table below. For a display on LCD both of them have equal display function: between -1 and +1 with the icon for inductive or capacitive load.

Load	C	\rightarrow		\leftarrow	L
Angle [°]	-180	-90	0	+90	+180 (179.99)
PF	-1	0	1	0	-1
ePF	-1	0	1	2	3

 Main menu \Rightarrow Measurements \Rightarrow Present values \Rightarrow PF & Power angle OK


Frequency

Network frequency is calculated from time periods of measured voltage.

 Main menu \Rightarrow Measurements \Rightarrow Present values \Rightarrow Frequency OK


Energy

Two ways of energy display are available: by individual meters and by tariffs for each meter separately. At a display of meter energy by tariffs, the sum in the upper line depends on the tariffs set in the meter.

 Main menu \Rightarrow Measurements \Rightarrow Present values \Rightarrow Energy OK

MD values

Display of MD values.

 Main menu ⇒ Measurements ⇒ Present values ⇒ MD values OK

THD - Total harmonic distortion


THD is calculated for phase currents, phase and phase-to-phase voltages and is expressed as percent of high harmonic components regarding RMS value or relative to first harmonic.

Instrument uses measuring technique of real effective (rms) value that assures exact measurements with the presence of high harmonics up to 32nd harmonic.

 Main menu ⇒ Measurements ⇒ Present values ⇒ THD OK

Customized screens

A display of customized screens depends on settings. See chapter *Settings of customized screens* on page 25.

 Main menu ⇒ Measurements ⇒ Present values ⇒ Custom OK

Overview

It combines several measurements on each display as the following screens are displayed:

 Explanation of measurements - connection mode 4u:

SCREEN 1:

Current phase measurements			Current phase measurements		
U Δ	Average voltage U \sim	V	P	Total active power P $_t$	W
1	Phase voltage U $_1$	V	P1	Active power P $_1$	W
2	Phase voltage U $_2$	V	P2	Active power P $_2$	W
3	Phase voltage U $_3$	V	P3	Active power P $_3$	W
I Δ	Average current I \sim	A	Q	Total reactive power Q $_t$	var
1	Current I $_1$	A	Q1	Reactive power Q $_1$	var
2	Current I $_2$	A	Q2	Reactive power Q $_1$	var
3	Current I $_3$	A	Q3	Reactive power Q $_1$	var

SCREEN 2:

Current phase-to-phase measurements			Current phase-to-phase measurements		
U Δ	Average phase-to-phase U \sim	V		Frequency f	Hz
12	Phase-to-phase voltage U $_{12}$	V	ϕ	Power angle ϕ_1	°
23	Phase-to-phase voltage U $_{23}$	V	ϕ	Power angle ϕ_2	°
31	Phase-to-phase voltage U $_{31}$	V	ϕ	Power angle ϕ_3	°
PF	Total power factor		ϕ	Average phase-to-phase angle ϕ	°
PF1	Power factor PF $_1$		ϕ	Power angle ϕ_{12}	°
PF2	Power factor PF $_2$		ϕ	Power angle ϕ_{23}	°
PF3	Power factor PF $_3$		ϕ	Power angle ϕ_1	°

SCREEN 3:

Dynamic MD values			Maximal MD values		
P+	MD active power P (positive)	W		MD active power P (positive)	W
P-	MD active power P (negative)	W		MD active power P (negative)	W
Q \pm	MD reactive power Q-L	var		MD reactive power Q-L	var
Q \pm	MD reactive power Q-C	var		MD reactive power Q-C	var
S	MD apparent power S	VA		MD apparent power S	VA
I1	MD current I1	A		MD current I1	A
I2	MD current I2	A		MD current I2	A
I3	MD current I3	A		MD current I3	A

Example for MC350 TH at connection 4u:

Main menu ⇒ Measurements ⇒ Present values ⇒ Overview OK / ⇒

```

UA 151.14 V P +70.00
I1 224.33 V P1 +69.99
O2 114.57 V P2 -0.003
O3 114.54 V P3 +0.011
IA 0.1362 A Q +55.91
I1 0.3992 A Q1 +55.80
O2 4.63mA Q2 -0.019
O3 5.11mA Q3 +0.124
    
```



```

IΔ 74.17 V 49.996 Hz
I2 109.90 V φ -2.25°
O3 2.74 V φ +0.03°
O1 109.87 V φ +2.20°
PF +0.769L φ +38.81°
PF1 +0.779L φ +3.67°
PF2 +1.000L φ -74.71°
PF3 +1.000L φ +65.57°
    
```



```

P+=64.933 4.4640kW
P-=0.000 6.562 W
Q+=53.277 3.3265kvar
Q+=0.000 14.994kvar
S =85.150 14.994kVA
I1=374.98m 10.012 A
I2= 4.65m 10.007 A
I3= 5.11m 10.007 A
    
```

Alarms

An alarm menu enables surveying state of alarms. In the basic alarm menu, groups of alarms with the states of individual alarms and data on alarm outputs are displayed in the bottom line. For each active alarm a number of an alarm is written in a certain group at a certain place: Group 1: 1...45...8. Dot stands for alarm not active.

```

Measurements
Present values
Alarms
Demo cycling
Main menu
    
```

OK

```

Alarms
Group 1: 123...
Group 2: .....
Out1
Measurements
    
```

OK

```

G1A1 U1 < 200.00
G1A2 U2 < 200.00
G1A3 U3 < 200.00
G1A4 U1 > 300.00
G1A5 U2 > 300.00
G1A6 U3 > 300.00
G1A7 --
G1A8 --
    
```

Survey of alarms

In a detailed survey alarms are collected in groups. A number of a group and alarm is stated in the first column, a measurement designation in the second, and a condition for alarm in the third one. Active alarm is marked.

Main menu ⇒ Measurements ⇒ Alarms OK / ⇒

Demonstration measurements

Demo cycling

Regarding the period that is defined in settings, measurement screen cycling is started until any key is pressed.

Main menu ⇒ Measurements ⇒ Demo cycling OK

TECHNICAL DATA

Accuracy

Measured values	Range		Accuracy class*
Rms current ($I_1, I_2, I_3, I_{avg}, I_n$)	1 A 5 A		0.5
Maximum current	12.5 A		0.5**
Rms phase voltage (U_1, U_2, U_3, U_{avg})	75 V _{L-N} 120 V _{L-N} 250 V _{L-N} 500 V _{L-N}		0.5
Maximum voltage	600 V		0.5**
Rms phase-to-phase voltage ($U_{12}, U_{23}, U_{31}, U_{avg}$)	120 V _{L-L} 210 V _{L-L} 400 V _{L-L} 800 V _{L-L}		0.5
Frequency (f) – actual	50 / 60 Hz		0.02
Nominal frequency range	16...400 Hz		
Power angle (ϕ)	-180...0...180°		0.5°
Power factor (PF)	-1...0...+1 U = 50 ... 120 % U_n I = 2 % ... 200 % I_n		1
THD	5...500 V 0...400 %		0.5
Active power	75 120	375 600	0.5
Reactive power	250 500	1250 2500	1
Apparent power	[W/var/VA] $I_n = 1 \text{ A}$	[W/var/VA] $I_n = 5 \text{ A}$	0.5
Active energy	EN 62053-21		Class 1***
Active energy (optional)	EN 62053-22		Class 0.5S***
Reactive energy	EN 62053-23		Class 2***
Pulse output	EN 62053-31		Class A & B



PLEASE NOTE



* – All measurements are calculated with high harmonic signals. For voltage up to 65 Hz or less, harmonics up to 32nd are measured.

** – From range

*** – Partial compliance

Maximal Inputs

Voltage input	Nominal voltage (U_n)	500 V_{L-N}
	Rating	75 V_{L-N} / 250 V_{L-N} / 500 V_{L-N}
	Overload	1.2 x U_n permanently
	Minimal measurement	2 V sinusoidal
	Maximal measurement	600 V_{L-N}
	Consumption	< 0.1 VA per phase
Current input	Nominal current (I_n)	5 A
	Rating	1 A / 5 A
	Overload	3 x I_n permanently, 25 x I_n – 3 s, 50 x I_n – 1 s
	Minimal measurement	Settings from starting current for all powers
	Maximal measurement	12,5 A sinusoidal
	Consumption	< 0.1 VA per phase
Frequency	Nominal frequency (f_n)	50, 60 Hz
	Measuring range	16...400 Hz
	Maximum range	10 Hz...1 kHz
Supply	Universal	AC voltage range 48...276 V AC frequency range 40...65 Hz DC voltage range 20...300 V Consumption < 5 VA
	AC	Voltage range 57.7, 63.5, 100, 110, 230, 240, 400, 500 V Frequency range 40...65 Hz Consumption < 3 VA

Connection

Permitted conductor cross-sections

Terminals	Max. conductor cross-sections
Voltage inputs (4)	$\leq 2.5 \text{ mm}^2$
Current inputs (3)	$\leq \varnothing 6 \text{ mm}$ one conductor with insulation
Supply (2)	$\leq 2.5 \text{ mm}^2$
Modules (2 x 3)	$\leq 2.5 \text{ mm}^2$ one conductor

Modules

Relay (alarm) module	No. of outputs	2
	Max. switching power	40 VA
	Max. switching voltage AC	40 V
	Max. switching voltage DC	35 V
	Max. switching current	1 A
	Impulse	Max. 4000 imp/hour Min. length 100 ms
Signal shape	Normal	Until the condition is fulfilled
	Impulse	Start at any new condition
	Permanent	Since condition
S0 (pulse) output module	No. of outputs	2
	Pulse length	2 ... 1000 ms
	Maximal voltage	40 V DC
	Maximal current	30 mA
Tariff input module	No. of inputs	2
	Voltage	230 V \pm 20% AC/DC 75...110 V AC/DC
Digital input module	No. of inputs	2
	Voltage	230 V \pm 20% AC/DC 75...110 V AC/DC 24 V DC

Communication

	RS232	RS485	USB
Type of connection	Direct	Network	Direct
Max. connection length	3 m	1000 m	5 m
Terminals	3 pin connector		USB – B type
Insulation	In accordance with EN 61010-1 standard		
Transfer mode	Asynchronous		
Protocol	MODBUS RTU /DNP3		
Transfer rate	2.400 to 115.200 bit/s	115.200 bit/s	

Electronic features

LCD	
Type	Graphic LCD
Size	128 x 64 dots
LCD refreshing	Every 200 ms
Response time	
Input – screen	All calculations are averaged over an interval of between 8 to 256 periods. Present interval is 64 periods, which is 1.28 second at 50 Hz.
Input – communication	
Input – alarm	
Memory	
Capacity	8 Mb built in flash
Divisions	Recorders A and B
	Alarms recorder
Selection of limit values	Average, minimum, maximum actual
Sampling period	1 to 60 min
LED's	
Pulse output	Red Energy flow
Alarm	Red Fulfilled condition for alarm
RTC backup supply	
Supercap	Lifespan 2 days

Safety features

Safety	In compliance with EN 61010–1 600 V rms, installation category II 300 V rms, installation category III Pollution degree 2
Test voltage	3.7 kV rms,
EMC	Directive on electromagnetic compatibility 2014/30/EU In compliance with EN 61326-1
Protection	In compliance with EN 60529 Front side: IP52 Rear side (with protection cover): IP20
Ambient conditions	
Temperature range of operation	–10 to +60°C
Storage temperature range	–40 to +70°C
Max. storage and transport humidity	≤ 75% r.h.
Enclosure	
Material	PC, incombustibility – self-extinguishability, in compliance with UL 94 V0
Weight	Max. 500 g


Dimensions

CASING


Construction

Appearance

All dimensions are in mm

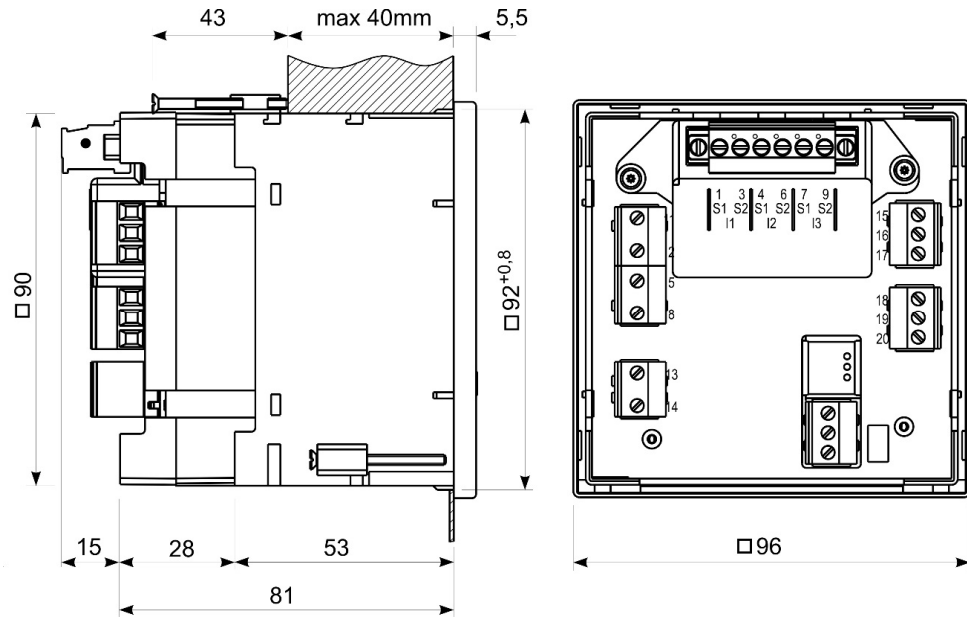

PANEL CUT OUT

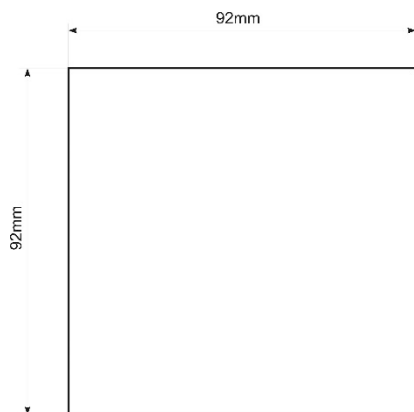

APPENDIX A: MODBUS PROTOCOL

Modbus communication protocol

Modbus and DNP3 protocol are enabled via RS232 or RS485 or USB communication port. The response is the same type as the request.

Modbus protocol

Modbus protocol enables operation of device on Modbus networks. For device with serial communication the Modbus protocol enables point to point (for example Device to PC) communication via RS232 communication and multi drop communication via RS485 communication. Modbus protocol is a widely supported open interconnect originally designed by Modicon.

The memory reference for input and holding registers is 30000 and 40000 respectively.

At MODBUS register 40100 (MODBUS table for measurements) you can select register map. Value "0" is MC7X0 compatible register map. Value "1" is MI71X0 compatible register map.

Register table for the actual measurements

Parameter	Type	MC7x0 RM Comp.		MI71x0 RM Comp.	
		Start	End	Start	End
Voltage U_1	T5	30107	30108	30044	30045
Voltage U_2	T5	30109	30110	30046	30047
Voltage U_3	T5	30111	30112	30048	30049
Average phase Voltage U_{\sim}	T5	30113	30114	30042	30043
Phase to phase voltage U_{12}	T5	30118	30119	30081	30082
Phase to phase voltage U_{23}	T5	30120	30121	30083	30084
Phase to phase voltage U_{31}	T5	30122	30123	30085	30086
Avg. phase to phase Voltage $U_{pp\sim}$	T5	30124	30125	30079	30080
Current I_1	T5	30126	30127	30036	30037
Current I_2	T5	30128	30129	30038	30039
Current I_3	T5	30130	30131	30040	30041
Total Current I	T5	30138	30139	30034	30035
Neutral current I_n	T5	30132	30133	30074	30075
Real Power P_1	T6	30142	30143	30020	30021
Real Power P_2	T6	30144	30145	30022	30023
Real Power P_3	T6	30146	30147	30024	30025
Total Real Power P	T6	30140	30141	30018	30019
Reactive Power Q_1	T6	30150	30151	30028	30029
Reactive Power Q_2	T6	30152	30153	30030	30031
Reactive Power Q_3	T6	30154	30155	30032	30033
Total Reactive Power Q	T5	30148	30149	30026	30027
Apparent Power S_1	T5	30158	30159	30052	30053
Apparent Power S_2	T5	30160	30161	30054	30055
Apparent Power S_3	T5	30162	30163	30056	30057
Total Apparent Power S	T7	30156	30157	30050	30051

Parameter	Type	MC7x0 RM Comp.		MI71x0 RM Comp.	
		Start	End	Start	End
Power Factor PF ₁	T7	30166	30167	30060	30061
Power Factor PF ₂	T7	30168	30169	30062	30063
Power Factor PF ₃	T7	30170	30171	30064	30065
Total Power Factor PF	T7	30164	30165	30058	30059
Power Angle U ₁ -I ₁	T2	30173		30071	
Power Angle U ₂ -I ₂	T2	30174		30072	
Power Angle U ₃ -I ₃	T2	30175		30073	
Power Angle atan2(Pt, Qt)	T2	30172		30070	
Angle U ₁ -U ₂	T2	30115		30076	
Angle U ₂ -U ₃	T2	30116		30077	
Angle U ₃ -U ₁	T2	30117		30078	
Frequency f	T5	30105	30106		
Frequency f (mHz)	T1			30066	
THD I ₁	T1	30188		30118	
THD I ₂	T1	30189		30119	
THD I ₃	T1	30190		30120	
THD U ₁	T1	30182		30112	
THD U ₂	T1	30183		30113	
THD U ₃	T1	30184		30114	
THD U ₁₂	T1	30185		30115	
THD U ₂₃	T1	30186		30116	
THD U ₃₁	T1	30187		30117	
Max Demand Since Last RESET					
MD Real Power P (positive)	T6	30542	30543		
MD Real Power P (negative)	T6	30548	30549		
MD Reactive Power Q - L	T6	30554	30555		
MD Reactive Power Q - C	T6	30560	30561		
MD Apparent Power S	T5	30536	30537		
MD Current I ₁	T5	30518	30519		
MD Current I ₂	T5	30524	30525		
MD Current I ₃	T5	30530	30531		
Dynamic Demand Values					
MD Real Power P (positive)	T6	30510	30511		
MD Real Power P (negative)	T6	30512	30513		
MD Reactive Power Q - L	T6	30514	30515		
MD Reactive Power Q -	T6	30516	30517		
MD Apparent Power S	T5	30508	30509		
MD Current I ₁	T5	30502	30503		
MD Current I ₂	T5	30504	30505		
MD Current I ₃	T5	30506	30507		
Energy					
Energy Counter 1 Exponent	T2	30401		30006	
Energy Counter 2 Exponent	T2	30402		30007	
Energy Counter 3 Exponent	T2	30403		30008	
Energy Counter 4 Exponent	T2	30404		30009	

Parameter	Type	MC7x0 RM Comp.		MI71x0 RM Comp.	
		Start	End	Start	End
Counter E1	T3	30406	30407	30010	30011
Counter E2	T3	30408	30409	30012	30013
Counter E3	T3	30410	30411	30014	30015
Counter E4	T3	30412	30413	30016	30017
Active tariff	T1	30405		30133	
Internal Temperature	T17	30181		30128	

Register table for the normalized actual measurements

Parameter	MODBUS		100% value
	Register	Type	
Voltage U_1	30801	T16	Un
Voltage U_2	30802	T16	Un
Voltage U_3	30803	T16	Un
Average phase Voltage U_{\sim}	30804	T16	Un
Phase to phase voltage U_{12}	30805	T16	Un
Phase to phase voltage U_{23}	30806	T16	Un
Phase to phase voltage U_{31}	30807	T16	Un
Average phase to phase Voltage $U_{pp\sim}$	30808	T16	Un
Current I_1	30809	T16	In
Current I_2	30810	T16	In
Current I_3	30811	T16	In
Total Current I	30812	T16	It
Neutral current In	30813	T16	In
Average Current I_{\sim}	30815	T16	In
Real Power P_1	30816	T17	Pn
Real Power P_2	30817	T17	Pn
Real Power P_3	30818	T17	Pn
Total Real Power P	30819	T17	Pt
Reactive Power Q_1	30820	T17	Pn
Reactive Power Q_2	30821	T17	Pn
Reactive Power Q_3	30822	T17	Pn
Total Reactive Power Q	30823	T17	Pt
Apparent Power S_1	30824	T16	Pn
Apparent Power S_2	30825	T16	Pn
Apparent Power S_3	30826	T16	Pn
Total Apparent Power S	30827	T16	Pt
Power Factor PF_1	30828	T17	1
Power Factor PF_2	30829	T17	1
Power Factor PF_3	30830	T17	1
Total Power Factor PF	30831	T17	1
CAP/IND P.F. Phase 1 (PF_1)	30832	T17	1
CAP/IND P.F. Phase 2 (PF_2)	30833	T17	1
CAP/IND P.F. Phase 3 (PF_3)	30834	T17	1
CAP/IND P.F. Total (PF_t)	30835	T17	1

Parameter	MODBUS		100% value
	Register	Type	
Power Angle U_1-I_1	30836	T17	100°
Power Angle U_2-I_2	30837	T17	100°
Power Angle U_3-I_3	30838	T17	100°
Power Angle atan 2(Pt, Qt)	30839	T17	100°
Angle U_1-U_2	30840	T17	100°
Angle U_2-U_3	30841	T17	100°
Angle U_3-U_1	30842	T17	100°
Frequency	30843	T17	$F_n+10\text{Hz}$
THD I_1	30845	T16	100%
THD I_2	30846	T16	100%
THD I_3	30847	T16	100%
THD U_1	30848	T16	100%
THD U_2	30849	T16	100%
THD U_3	30850	T16	100%
THD U_{12}	30851	T16	100%
THD U_{23}	30852	T16	100%
THD U_{31}	30853	T16	100%
Max Demand Since Last Reset			
MD Real Power P (positive)	30854	T16	Pt
MD Real Power P (negative)	30855	T16	Pt
MD Reactive Power Q – L	30856	T16	Pt
MD Reactive Power Q – C	30857	T16	Pt
MD Apparent Power S	30858	T16	Pt
MD Current I_1	30859	T16	In
MD Current I_2	30860	T16	In
MD Current I_3	30861	T16	In
Dynamic Demand Values			
MD Real Power P (positive)	30862	T16	Pt
MD Real Power P (negative)	30863	T16	Pt
MD Reactive Power Q – L	30864	T16	Pt
MD Reactive Power Q – C	30865	T16	Pt
MD Apparent Power S	30866	T16	Pt
MD Current I_1	30867	T16	In
MD Current I_2	30868	T16	In
MD Current I_3	30869	T16	In
Energy			
Energy Counter 1	30870	T17	Actual counter value MOD 20000 is returned
Energy Counter 2	30871	T17	
Energy Counter 3	30872	T17	
Energy Counter 4	30873	T17	
Active Tariff	30879	T1	
Internal Temperature	30880	T17	100°

100% values calculations for normalized measurements

Un =	$(R40147 / R40146) * R30015 * R40149$
In =	$(R40145 / R40144) * R30017 * R40148$
Pn =	Un*In
It =	In Connection Mode: 1b
It =	3*In Connection Modes: 3b, 4b, 3u, 4u
Pt =	Pn Connection Mode: 1b
Pt =	3*Pn Connection Modes: 3b, 4b, 3u, 4u
Fn =	R40150

Register	Content
30015	Calibration voltage
30017	Calibration current

Register table for the basic settings

Register	Content	Type	Ind	Values / Dependencies	Min	Max	P. Level
40143	Connection Mode	T1	0	No mode	1	5	2
			1	1b - Single Phase			
			2	3b - 3 phase 3 wire balanced			
			3	4b - 3 phase 4 wire balanced			
			4	3u - 3 phase 3 wire unbalanced			
			5	4u - 3 phase 4 wire unbalanced			
40144	CT Secondary	T4		mA			2
40145	CT Primary	T4		A/10			2
40146	VT Secondary	T4		mV			2
40147	VT Primary	T4		V/10			2
40148	Current input range (%)	T16		10000 for 100%	5,00	200,00	2
40149	Voltage input range (%)	T16		10000 for 100%	2,50	100,00	2
40150	Frequency nominal value	T1		Hz	10	1000	2

Data types decoding

Type	Bit mask	Description
T1		Unsigned Value (16 bit) Example: 12345 = 3039(16)
T2		Signed Value (16 bit) Example: -12345 = CFC7(16)
T3		Signed Long Value (32 bit) Example: 123456789 = 075B CD 15(16)
T4	bits # 15...14 bits # 13...00	Short Unsigned float (16 bit) Decade Exponent(Unsigned 2 bit) Binary Unsigned Value (14 bit) Example: 10000*102 = A710(16)
T5	bits # 31...24 bits # 23...00	Unsigned Measurement (32 bit) Decade Exponent(Signed 8 bit) Binary Unsigned Value (24 bit) Example: 123456*10-3 = FD01 E240(16)
T6	bits # 31...24 bits # 23...00	Signed Measurement (32 bit) Decade Exponent (Signed 8 bit) Binary Signed value (24 bit) Example: - 123456*10-3 = FDFE 1DC0(16)
T7	bits # 31...24 bits # 23...16 bits # 15...00	Power Factor (32 bit) Sign: Import/Export (00/FF) Sign: Inductive/Capacitive (00/FF) Unsigned Value (16 bit), 4 decimal places Example: 0.9876 CAP = 00FF 2694(16)
T9	bits # 31...24 bits # 23...16 bits # 15...08 bits # 07...00	Time (32 bit) 1/100s 00 - 99 (BCD) Seconds 00 - 59 (BCD) Minutes 00 - 59 (BCD) Hours 00 - 24 (BCD) Example: 15:42:03.75 = 7503 4215(16)
T10	bits # 31...24 bits # 23...16 bits # 15...00	Date (32 bit) Day of month 01 - 31 (BCD) Month of year 01 - 12 (BCD) Year (unsigned integer) 1998..4095 Example: 10, SEP 2000 = 1009 07D0(16)
T16		Unsigned Value (16 bit), 2 decimal places Example: 123.45 = 3039(16)
T17		Signed Value (16 bit), 2 decimal places Example: -123.45 = CFC7(16)
T_Str4		Text: 4 characters (2 characters for 16 bit register)
T_Str6		Text: 6 characters (2 characters for 16 bit register)
T_Str8		Text: 8 characters (2 characters for 16 bit register)
T_Str16		Text: 16 characters (2 characters for 16 bit register)
T_Str40		Text: 40 characters (2 characters for 16 bit register)

APPENDIX B: DNP3 COMMUNICATION PROTOCOL

DNP3 communication protocol

Modbus and DNP3 protocol are enabled via RS232 or RS485 or USB communication port. The response is the same type as the request.

DNP3

DNP3 protocol enables operation of device on DNP3 networks. For device with serial communication the DNP3 protocol enables point to point (for example Device to PC) communication via RS232 communication and multi drop communication via RS485 communication.

Object			Request		Response	
Object Number	Variation Number	Description	Function Codes (dec)	Qualifier Codes (hex)	Function Codes (dec)	Qualifier Codes (hex)
0	242	Device Attributes - software version	1	00	129	00, 17
0	243	Device Attributes – hardware version	1	00	129	00, 17
0	246	Device Attributes – user assigned ID	1	00	129	00, 17
0	248	Device Attributes – serial number	1	00	129	00, 17
0	250	Device Attributes – product name	1	00	129	00, 17
0	252	Device Attributes – manufacture name	1	00	129	00, 17
0	254	Device Attributes – nonspecific all attributes request	1	00, 06		
0	255	Device Attributes – list of attribute variation	1	00, 06	129	00, 5B

Points for object 0						
0	Software version	T_Str3	Data	var	242	
0	Hardware version	T_Str2	Data	var	243	
0	user assigned ID	T_Str2	Data	var	246	
0	serial number	T_Str8	Data	var	248	
0	product name	T_Str16	Data	var	250	
0	manufacture name	T_Str20	Data	var	252	

Object			Request		Response	
Object Number	Variation Number	Description	Function Codes (dec)	Qualifier Codes (hex)	Function Codes (dec)	Qualifier Codes (hex)
10	0	Binary output status with flag	1	6		
10	2	Binary output status with flag	1	00, 01 ,06	129	00, 01

Points for object 10						
0	Relay 1	T1	Data	0	1	
1	Relay 2	T1	Data	0	1	

Register table for the actual measurements

Object			Request		Response	
Object Number	Variation Number	Description	Function Codes (dec)	Qualifier Codes (hex)	Function Codes (dec)	Qualifier Codes (hex)
30	0	16-Bit Analog Input without flag	1	00, 01, 06		
30	2	16-Bit Analog Input with flag	1	00, 01, 06	129	00, 01
30	4	16-Bit Analog Input without flag	1	00, 01, 06	129	00, 01

Points for object 30						
0	U1	T16	Data	-Un	+Un	
1	U2	T16	Data	-Un	+Un	
2	U3	T16	Data	-Un	+Un	
3	Uavg (phase to neutral)	T16	Data	-Un	+Un	
4	U12	T16	Data	-Un	+Un	
5	U23	T16	Data	-Un	+Un	
6	U31	T16	Data	-Un	+Un	
7	Uavg (phase to phase)	T16	Data	-Un	+Un	
8	I1	T16	Data	-In	+In	
9	I2	T16	Data	-In	+In	
10	I3	T16	Data	-In	+In	
11	I total	T16	Data	-In	+In	
12	I neutral (calculated)	T16	Data	-In	+In	
13	I neutral (measured)	T16	Data	-In	+In	
14	Iavg	T16	Data	-In	+In	
15	Active Power Phase L1 (P1)	T17	Data	-Pn	+Pn	
16	Active Power Phase L2 (P2)	T17	Data	-Pn	+Pn	
17	Active Power Phase L3 (P3)	T17	Data	-Pn	+Pn	
18	Active Power Total (Pt)	T17	Data	-Pt	+Pt	
19	Reactive Power Phase L1 (Q1)	T17	Data	-Pn	+Pn	
20	Reactive Power Phase L2 (Q2)	T17	Data	-Pn	+Pn	
21	Reactive Power Phase L3 (Q3)	T17	Data	-Pn	+Pn	
22	Reactive Power Total (Qt)	T17	Data	-Pt	+Pt	
23	Apparent Power Phase L1 (S1)	T16	Data	-Pn	+Pn	
24	Apparent Power Phase L2 (S2)	T16	Data	-Pn	+Pn	
25	Apparent Power Phase L3 (S3)	T16	Data	-Pn	+Pn	
26	Apparent Power Total (St)	T16	Data	-Pt	+Pt	
27	Power Factor Phase 1 (PF1)	T17	Data	-1	+1	
28	Power Factor Phase 2 (PF2)	T17	Data	-1	+1	
29	Power Factor Phase 3 (PF3)	T17	Data	-1	+1	
30	Power Factor Total (PFt)	T17	Data	-1	+1	
31	CAP/IND P. F. Phase 1 (PF1)	T17	Data	-1 CAP	+1	300% for -1 IND
32	CAP/IND P. F. Phase 2 (PF2)	T17	Data	-1 CAP	+1	300% for -1 IND
33	CAP/IND P. F. Phase 3 (PF3)	T17	Data	-1 CAP	+1	300% for -1 IND
34	CAP/IND P. F. Total (PFt)	T17	Data	-1 CAP	+1	300% for -1 IND
35	j1 (angle between U1 and I1)	T17	Data	-100°	+100°	

Points for object 30						
36	j2 (angle between U2 and I2)	T17	Data	-100°	+100°	
37	j3 (angle between U3 and I3)	T17	Data	-100°	+100°	
38	Power Angle Total (atan2(Pt,Qt))	T17	Data	-100°	+100°	
39	j12 (angle between U1 and U2)	T17	Data	-100°	+100°	
40	j23 (angle between U2 and U3)	T17	Data	-100°	+100°	
41	j31 (angle between U3 and U1)	T17	Data	-100°	+100°	
42	Frequency	T17	Data	Fn-10Hz	Fn+10Hz	
43	U unbalance	T16	Data	-100%	+100%	
44	I1 THD%	T16	Data	-100%	+100%	
45	I2 THD%	T16	Data	-100%	+100%	
46	I3 THD%	T16	Data	-100%	+100%	
47	U1 THD%	T16	Data	-100%	+100%	
48	U2 THD%	T16	Data	-100%	+100%	
49	U3 THD%	T16	Data	-100%	+100%	
50	U12 THD%	T16	Data	-100%	+100%	
51	U23 THD%	T16	Data	-100%	+100%	
52	U31 THD%	T16	Data	-100%	+100%	
	MAX DEMAND SINCE LAST RESET					
53	Active Power Total (Pt) - (positive)	T16	Data	-Pt	+Pt	
54	Active Power Total (Pt) - (negative)	T16	Data	-Pt	+Pt	
55	Reactive Power Total (Qt) - L	T16	Data	-Pt	+Pt	
56	Reactive Power Total (Qt) - C	T16	Data	-Pt	+Pt	
57	Apparent Power Total (St)	T16	Data	-Pt	+Pt	
58	I1	T16	Data	-In	+In	
59	I2	T16	Data	-In	+In	
60	I3	T16	Data	-In	+In	
	DYNAMIC DEMAND VALUES					
61	Active Power Total (Pt) - (positive)	T16	Data	-Pt	+Pt	
62	Active Power Total (Pt) - (negative)	T16	Data	-Pt	+Pt	
63	Reactive Power Total (Qt) - L	T16	Data	-Pt	+Pt	
64	Reactive Power Total (Qt) - C	T16	Data	-Pt	+Pt	
65	Apparent Power Total (St)	T16	Data	-Pt	+Pt	
66	I1	T16	Data	-In	+In	
67	I2	T16	Data	-In	+In	
68	I3	T16	Data	-In	+In	
	ENERGY					
69	Energy Counter 1	T17	Data			(32-bit value) MOD 20000
70	Energy Counter 2	T17	Data			(32-bit value) MOD 20000
71	Energy Counter 3	T17	Data			(32-bit value) MOD 20000
72	Energy Counter 4	T17	Data			(32-bit value) MOD 20000
73	Energy Counter 1 Cost	T17	Data			(32-bit value) MOD 20000
74	Energy Counter 2 Cost	T17	Data			(32-bit value) MOD 20000
75	Energy Counter 3 Cost	T17	Data			(32-bit value) MOD 20000
76	Energy Counter 4 Cost	T17	Data			(32-bit value) MOD 20000
77	Total Energy Counter Cost	T17	Data			(32-bit value) MOD 20000
78	Aktiv Tariff	T1	Data			
79	Internal Temperature	T17	Data	-100°	+100°	

Object			Request		Response	
Object Number	Variation Number	Description	Function Codes (dec)	Qualifier Codes (hex)	Function Codes (dec)	Qualifier Codes (hex)
60	1	CLASS 0 DATA	1	6		
60	2	CLASS 1 DATA	1.22*	06		
60	3	CLASS 2 DATA	1.22*	06		
60	4	CLASS 3 DATA	1.22*	06		

*only object 30

Tests:

- Invalid start octets
- Invalid primary function code
- Invalid destination address
- Invalid CRC
- Invalid FCV

APPENDIX E: CALCULATIONS & EQUATIONS

Calculations

Definitions of symbols

No	Symbol	Definition
1	M_v	Sample factor
2	M_p	Average interval
3	U_f	Phase voltage (U1, U2 or U3)
4	U_{ff}	Phase-to-phase voltage (U12, U23 or U31)
5	N	Total number of samples in a period
6	n	Sample number ($0 \leq n \leq N$)
7	x, y	Phase number (1, 2 or 3)
8	i_n	Current sample n
9	u_{fn}	Phase voltage sample n
10	u_{ffn}	Phase-to-phase voltage sample n
11	ϕ_f	Power angle between current and phase voltage f (ϕ_1, ϕ_2 or ϕ_3)

Equations

Voltage

$$U_f = \sqrt{\frac{\sum_{n=1}^N u_n^2}{N}}$$

Phase voltage

N - 128 samples in one period (up to 65 Hz)

N - 128 samples in M_v periods (above 65Hz)

Example: 400 Hz $\rightarrow M_v = 7$

$$U_{xy} = \sqrt{\frac{\sum_{n=1}^N (u_{xn} - u_{yn})^2}{N}}$$

Phase-to-phase voltage

u_x, u_y - phase voltages (U_f)

N - a number of samples in a period

Current

$$I_{\text{RMS}} = \sqrt{\frac{\sum_{n=1}^N i_n^2}{N}}$$

Phase current

N - 128 samples in a period (up to 65 Hz)

N - 128 samples in more periods (above 65 Hz)

$$I_n = \sqrt{\frac{\sum_{n=1}^N (i_{1n} + i_{2n} + i_{3n})^2}{N}}$$

Neutral current

i - n sample of phase current (1, 2 or 3)

N - 128 samples in a period (up to 65 Hz)

Power

$$P_f = \frac{1}{N} \cdot \sum_{n=1}^N (u_{fn} \cdot i_{fn})$$

Active power by phases

N - a number of periods

n - index of sample in a period

f - phase designation

$$P_t = P_1 + P_2 + P_3$$

Total active power

t - total power

1, 2, 3 - phase designation

$$\text{Sign}Q_f(\varphi)$$

$$\varphi \in [0^\circ - 180^\circ] \Rightarrow \text{Sign}Q_f(\varphi) = +1$$

$$\varphi \in [180^\circ - 360^\circ] \Rightarrow \text{Sign}Q_f(\varphi) = -1$$

Reactive power sign

Q_f - reactive power (by phases)

φ - power angle

$$S_f = U_f \cdot I_f$$

Apparent power by phases

U_f - phase voltage

I_f - phase current

$$S_t = S_1 + S_2 + S_3$$

Total apparent power

S_f - apparent power by phases

$$Q_f = \text{Sign}Q_f(\varphi) \cdot \sqrt{S_f^2 - P_f^2}$$

Reactive power by phases

S_f - apparent power by phases

P_f - active power by phases

$$Q_t = Q_1 + Q_2 + Q_3$$

Total reactive power

Q_f - reactive power by phases

$$\varphi_s = \arctan2(P_t, Q_t)$$

$$\varphi_s = [-180^\circ, 179,99^\circ]$$

Total power angle

P_t - total active power

S_t - total apparent power

$$\text{PF}_t = \frac{P_t}{S_t}$$

3 phase power factor

P_t - phase active power

S_t - phase apparent power

$$\text{PF}_f = \frac{P_f}{S_f}$$

Power factor by phases

P_f - phase active power

S_f - phase apparent power

THD

$$I_f THD(\%) = \frac{\sqrt{\sum_{n=2}^{63} I_n^2}}{I_1} \cdot 100$$

Current THD

I_1 - value of first harmonic
 n - number of harmonic

$$U_f THD(\%) = \frac{\sqrt{\sum_{n=2}^{63} U_{fn}^2}}{U_{f1}} \cdot 100$$

Phase voltage THD

U_1 - value of first harmonic
 n - number of harmonic

$$U_{ff} THD(\%) = \frac{\sqrt{\sum_{n=2}^{63} U_{ffn}^2}}{U_{ff1}} \cdot 100$$

Phase-to-phase voltage THD

U_1 - value of first harmonic
 n - number of harmonic

Printed in Slovenia • Subject to change without notice • GB K 22.444.003



Iskra, d.d.

Stegne 21

SI-1000 Ljubljana

Slovenia

Tel.: +386 1 51 31 000

Fax: +386 1 51 11 532

www.iskra.eu

info@iskra.eu